



MAXIFY

[Maxify MB 2050](#); [Maxify MB 2150](#); [Maxify MB 2155](#); [Maxify MB 2350](#); [Maxify MB 2750](#); [Maxify MB 2755](#).

PIXMA IP

[PIXMA iP 2700](#); [PIXMA iP 2702](#); [Pixma IP 2800](#); [Pixma IP 2820](#); [Pixma IP 2840](#); [Pixma IP 2850](#); [PIXMA iP 3600](#); [PIXMA iP 4600](#); [PIXMA iP 4700](#); [PIXMA IP 7200](#); [PIXMA IP 7250](#); [Pixma IP 8700](#); [PIXMA IP 8750](#).

PIXMA IX

[Pixma IX 6800](#); [PIXMA IX 6850](#).

PIXMA MG

[Pixma MG 2100](#); [Pixma MG 2140](#); [PIXMA MG 2150](#); [Pixma MG 2155](#); [Pixma MG 2200](#); [Pixma MG 2240](#); [PIXMA MG 2250](#); [Pixma MG 2255](#); [Pixma MG 2400](#); [Pixma MG 2440](#); [Pixma MG 2450](#); [Pixma MG 2455](#); [Pixma MG 2500](#); [Pixma MG 2540](#); [Pixma MG 2540s](#); [Pixma MG 2545](#); [Pixma MG 2550](#); [Pixma MG 2550S](#); [Pixma MG 2555](#); [Pixma MG 2555S](#); [Pixma MG 2900](#); [Pixma MG 2940](#); [Pixma MG 2950](#); [Pixma MG 2950S](#); [Pixma MG 3000](#); [Pixma MG 3040](#); [Pixma MG 3050](#); [Pixma MG 3051](#); [Pixma MG 3052](#); [Pixma MG 3053](#); [Pixma MG 3100](#); [Pixma MG 3140](#); [PIXMA MG 3150](#); [Pixma MG 3155](#); [Pixma MG 3200](#); [Pixma MG 3240](#); [PIXMA MG 3250](#); [Pixma MG 3255](#); [Pixma MG 3500](#); [Pixma MG 3520](#); [Pixma MG 3540](#); [PIXMA MG 3550](#); [Pixma MG 3600](#); [Pixma MG 3640](#); [PIXMA MG 3650](#); [Pixma MG 4140](#); [PIXMA MG 4150](#); [PIXMA MG 4200](#); [Pixma MG 4240](#); [PIXMA MG 4250](#); [Pixma MG 5400](#); [PIXMA MG 5450](#); [Pixma MG 5500](#); [Pixma MG 5550](#); [Pixma MG 5600](#); [PIXMA MG 5650](#); [PIXMA MG 5655](#); [Pixma MG 5750](#); [Pixma MG 5751](#); [Pixma MG 5752](#); [Pixma MG 5753](#); [Pixma MG 6300](#); [PIXMA MG 6350](#); [Pixma MG 6400](#); [Pixma MG 6450](#); [Pixma MG 6600](#); [PIXMA MG 6650](#); [Pixma MG 6850](#); [Pixma MG 6851](#); [Pixma MG 6852](#); [Pixma MG 6853](#); [PIXMA MG 7100](#); [PIXMA MG 7150](#); [Pixma MG 7500](#); [PIXMA MG 7550](#); [Pixma MG 7750](#); [Pixma MG 7751](#); [Pixma MG 7752](#); [Pixma MG 7753](#).

PIXMA MP

[PIXMA MP 230](#); [PIXMA MP 240](#); [PIXMA MP 250](#); [PIXMA MP 252](#); [PIXMA MP 260](#); [PIXMA MP 270](#); [PIXMA MP 272](#); [PIXMA MP 280](#); [PIXMA MP 282](#); [PIXMA MP 480](#); [PIXMA MP 490](#); [PIXMA MP 492](#); [PIXMA MP 495](#); [PIXMA MP 499](#); [PIXMA MP 540](#); [PIXMA MP 550](#); [PIXMA MP 560](#); [PIXMA MP 620](#); [PIXMA MP 630](#); [PIXMA MP 640](#); [PIXMA MP 980](#); [PIXMA MP 990](#).

PIXMA MX

[PIXMA MX 320](#); [PIXMA MX 330](#); [PIXMA MX 340](#); [PIXMA MX 350](#); [PIXMA MX 360](#); [Pixma MX 370](#); [Pixma MX 374](#); [PIXMA MX 375](#); [Pixma MX 390](#); [Pixma MX 394](#); [PIXMA MX 395](#); [PIXMA MX 410](#); [PIXMA MX 420](#); [Pixma MX 430](#); [Pixma MX 432](#); [PIXMA MX 435](#); [Pixma MX 450](#); [Pixma MX 454](#); [PIXMA MX 455](#); [Pixma MX 470](#); [Pixma MX 472](#); [Pixma MX 474](#); [PIXMA MX 475](#); [Pixma MX 490](#); [Pixma MX 494](#); [Pixma MX 495](#); [Pixma MX 510](#); [Pixma MX 514](#); [PIXMA MX 515](#); [Pixma MX 520](#); [Pixma MX 524](#); [PIXMA MX 525](#); [Pixma MX 530](#); [Pixma MX 532](#); [Pixma MX 534](#); [PIXMA MX 535](#); [Pixma MX 720](#); [PIXMA MX 725](#); [PIXMA MX 860](#); [PIXMA MX 870](#); [Pixma MX 920](#); [PIXMA MX 925](#).

PIXMA TR

[Pixma TR 4500](#); [Pixma TR 4540](#); [Pixma TR 4541](#); [Pixma TR 4550](#); [Pixma TR 4551](#); [Pixma TR 4600](#); [Pixma TR 4640](#); [Pixma TR 4650](#); [Pixma TR 4651](#); [Pixma TR 4750](#); [Pixma TR 4751](#); [Pixma TR 4756](#); [Pixma TR 4757](#); [Pixma TR 7500 Series](#); [Pixma TR 7550](#); [Pixma TR 8500 Series](#); [Pixma TR 8550](#).

PIXMA TS

[Pixma TS 205](#); [Pixma TS 302](#); [Pixma TS 304](#); [Pixma TS 305](#); [Pixma TS 705](#); [Pixma TS 3100](#); [Pixma TS 3150](#); [Pixma TS 3151](#); [Pixma TS 3152](#); [Pixma TS 3300](#); [Pixma TS 3350](#); [Pixma TS 3351](#); [Pixma TS 3352](#); [Pixma TS 3355](#); [Pixma TS 3400](#); [Pixma TS 3440](#); [Pixma TS 3450](#); [Pixma TS 3451](#); [Pixma TS 3452](#); [Pixma TS 3550i](#); [Pixma TS 3551i](#); [Pixma TS 3750i](#); [Pixma TS 3751i](#); [Pixma TS 3752i](#); [Pixma TS 5050](#); [Pixma TS 5051](#); [Pixma TS 5053](#); [Pixma TS 5100](#); [Pixma TS 5140](#); [Pixma TS 5150](#); [Pixma TS 5151](#); [Pixma TS 5300](#); [Pixma TS 5350](#); [Pixma TS 5350a](#); [Pixma TS 5350i](#); [Pixma TS 5351](#); [Pixma TS 5351a](#); [Pixma TS 5351i](#); [Pixma TS 5352](#); [Pixma TS 5352a](#); [Pixma TS 5353](#); [Pixma TS 5353a](#); [Pixma TS 5355](#); [Pixma TS 5355a](#); [Pixma TS 5400](#); [Pixma TS 5450](#); [Pixma TS 5451](#); [Pixma TS 5452](#); [Pixma TS 6050](#); [Pixma TS 6051](#); [Pixma TS 6052](#); [Pixma TS 6100 Series](#); [Pixma TS 6150](#); [Pixma TS 6151](#); [Pixma TS 6200 Series](#); [Pixma TS 6240](#); [Pixma TS 6241](#); [Pixma TS 6250](#); [Pixma TS 6251](#); [Pixma TS 6300 Series](#); [Pixma TS 6350](#); [Pixma TS 6351](#); [Pixma TS 7400](#); [Pixma TS 7450](#); [Pixma TS 7450a](#); [Pixma TS 7450i](#); [Pixma TS 7451](#); [Pixma TS 7451a](#); [Pixma TS 7451i](#); [Pixma TS 8050](#); [Pixma TS 8051](#); [Pixma TS 8052](#); [Pixma TS 8053](#); [Pixma TS 8100 Series](#); [Pixma TS 8150](#); [Pixma TS 8151](#); [Pixma TS 8152](#); [Pixma TS 8200 Series](#); [Pixma TS 8240](#); [Pixma TS 8241](#); [Pixma TS 8250](#); [Pixma TS 8251](#); [Pixma TS 8252](#); [Pixma TS 8300 Series](#); [Pixma TS 8350](#); [Pixma TS 8351](#); [Pixma TS 8352](#); [Pixma TS 9050](#); [Pixma TS 9055](#); [Pixma TS 9100 Series](#); [Pixma TS 9150](#); [Pixma TS 9155](#); [Pixma TS 9500 Series](#); [Pixma TS 9540](#); [Pixma TS 9541C](#); [Pixma TS 9550](#); [Pixma TS 9551C](#).

COMPATIBLES



ORIGINALES



PIXMA iP 2700; PIXMA iP 2702; PIXMA MP 230; PIXMA MP 240; PIXMA MP 250; PIXMA MP 252; PIXMA MP 260; PIXMA MP 270; PIXMA MP 272; PIXMA MP 280; PIXMA MP 282; PIXMA MP 480; PIXMA MP 490; PIXMA MP 492; PIXMA MP 495; PIXMA MP 499; PIXMA MX 320; PIXMA MX 330; PIXMA MX 340; PIXMA MX 350; PIXMA MX 360; PIXMA MX 410; PIXMA MX 420.

COMPATIBLES



ORIGINALES



PIXMA iP 3600; PIXMA iP 4600; PIXMA iP 4700; PIXMA MP 540; PIXMA MP 550; PIXMA MP 560; PIXMA MP 620; PIXMA MP 630; PIXMA MP 640; PIXMA MP 980; PIXMA MP 990; PIXMA MX 860; PIXMA MX 870.

COMPATIBLES



ORIGINALES



Pixma MG 2100; Pixma MG 2140; PIXMA MG 2150; Pixma MG 2155; Pixma MG 2200; Pixma MG 2240; PIXMA MG 2250; Pixma MG 2255; Pixma MG 3100; Pixma MG 3140; PIXMA MG 3150; Pixma MG 3155; Pixma MG 3200; Pixma MG 3240; PIXMA MG 3250; Pixma MG 3255; Pixma MG 3500; Pixma MG 3520; Pixma MG 3540; PIXMA MG 3550; Pixma MG 3600; Pixma MG 3640; PIXMA MG 3650; Pixma MG 4140; PIXMA MG 4150; PIXMA MG 4200; Pixma MG 4240; PIXMA MG 4250; Pixma MX 370; Pixma MX 374; PIXMA MX 375; Pixma MX 390; Pixma MX 394; PIXMA MX 395; Pixma MX 430; Pixma MX 432; PIXMA MX 435; Pixma MX 450; Pixma MX 454; PIXMA MX 455; Pixma MX 470; Pixma MX 472; Pixma MX 474; PIXMA MX 475; Pixma MX 510; Pixma MX 514; PIXMA MX 515; Pixma MX 520; Pixma MX 524; PIXMA MX 525; Pixma MX 530; Pixma MX 532; Pixma MX 534; PIXMA MX 535; Pixma TS 5100; Pixma TS 5140; Pixma TS 5150; Pixma TS 5151.

COMPATIBLES



ORIGINALES



Pixma IP 2800; Pixma IP 2820; Pixma IP 2840; Pixma IP 2850; Pixma MG 2400; Pixma MG 2440; Pixma MG 2450; Pixma MG 2455; Pixma MG 2500; Pixma MG 2540; Pixma MG 2540s; Pixma MG 2545; Pixma MG 2550; Pixma MG 2550S; Pixma MG 2555; Pixma MG 2555S; Pixma MG 2900; Pixma MG 2940; Pixma MG 2950; Pixma MG 2950S; Pixma MG 3000; Pixma MG 3040; Pixma MG 3050; Pixma MG 3051; Pixma MG 3052; Pixma MG 3053; Pixma MX 490; Pixma MX 494; Pixma MX 495; Pixma TR 4500; Pixma TR 4540; Pixma TR 4541; Pixma TR 4550; Pixma TR 4551; Pixma TR 4600; Pixma TR 4640; Pixma TR 4650; Pixma TR 4651; Pixma TS 205; Pixma TS 302; Pixma TS 304; Pixma TS 305; Pixma TS 3100; Pixma TS 3150; Pixma TS 3151; Pixma TS 3152; Pixma TS 3300; Pixma TS 3350; Pixma TS 3351; Pixma TS 3352; Pixma TS 3355; Pixma TS 3400; Pixma TS 3440; Pixma TS 3450; Pixma TS 3451; Pixma TS 3452.

COMPATIBLES



ORIGINALES



PIXMA IP 7200; PIXMA IP 7250; Pixma IP 8700; PIXMA IP 8750; Pixma IX 6800; PIXMA IX 6850; Pixma MG 5400; PIXMA MG 5450; Pixma MG 5500; Pixma MG 5550; Pixma MG 5600; PIXMA MG 5650; PIXMA MG 5655; Pixma MG 6300; PIXMA MG 6350; Pixma MG 6400; Pixma MG 6450; Pixma MG 6600; PIXMA MG 6650; PIXMA MG 7100; PIXMA MG 7150; Pixma MG 7500; PIXMA MG 7550; Pixma MX 720; PIXMA MX 725; Pixma MX 920; PIXMA MX 925.

ORIGINALES



Pixma TS 5300; Pixma TS 5350; Pixma TS 5350a; Pixma TS 5350i; Pixma TS 5351; Pixma TS 5351a; Pixma TS 5351i; Pixma TS 5352; Pixma TS 5352a; Pixma TS 5353; Pixma TS 5353a; Pixma TS 5355; Pixma TS 5355a; Pixma TS 5400; Pixma TS 5450; Pixma TS 5451; Pixma TS 5452; Pixma TS 7400; Pixma TS 7450; Pixma TS 7450a; Pixma TS 7450i; Pixma TS 7451; Pixma TS 7451a; Pixma TS 7451i.

COMPATIBLES



ORIGINALES



Pixma MG 5750; Pixma MG 5751; Pixma MG 5752; Pixma MG 5753; Pixma MG 6850; Pixma MG 6851; Pixma MG 6852; Pixma MG 6853; Pixma MG 7750; Pixma MG 7751; Pixma MG 7752; Pixma MG 7753; Pixma TS 5050; Pixma TS 5051; Pixma TS 5053; Pixma TS 6050; Pixma TS 6051; Pixma TS 6052; Pixma TS 8050; Pixma TS 8051; Pixma TS 8052; Pixma TS 8053; Pixma TS 9050; Pixma TS 9055.

COMPATIBLES



ORIGINALES



Pixma TR 4750i; Pixma TR 4751i; Pixma TR 4756i; Pixma TR 4757i; Pixma TS 3550i; Pixma TS 3551i; Pixma TS 3750i; Pixma TS 3751i; Pixma TS 3752i.



COMPATIBLES



ORIGINALES



Pixma TR 7500 Series; Pixma TR 7550; Pixma TR 8500 Series; Pixma TR 8550; Pixma TS 6100 Series; Pixma TS 6150; Pixma TS 6151; Pixma TS 6200 Series; Pixma TS 6240; Pixma TS 6241; Pixma TS 6250; Pixma TS 6251; Pixma TS 6300 Series; Pixma TS 6350; Pixma TS 6351; Pixma TS 705; Pixma TS 8100 Series; Pixma TS 8150; Pixma TS 8151; Pixma TS 8152; Pixma TS 8200 Series; Pixma TS 8240; Pixma TS 8241; Pixma TS 8250; Pixma TS 8251; Pixma TS 8252; Pixma TS 8300 Series; Pixma TS 8350; Pixma TS 8351; Pixma TS 8352; Pixma TS 9100 Series; Pixma TS 9150; Pixma TS 9155; Pixma TS 9500 Series; Pixma TS 9540; Pixma TS 9541C; Pixma TS 9550; Pixma TS 9551C.

COMPATIBLES



ORIGINALES



Maxify MB 2050; Maxify MB 2150; Maxify MB 2155; Maxify MB 2350; Maxify MB 2750; Maxify MB 2755.