



EXPRESSION HOME XP

[Expression Home XP-30](#); [Expression Home XP-102](#); [Expression Home XP-202](#); [Expression Home XP-205](#); [Expression Home XP-212](#); [Expression Home XP-215](#); [Expression Home XP-225](#); [Expression Home XP-235](#); [Expression Home XP-245](#); [Expression Home XP-247](#); [Expression Home XP-255](#); [Expression Home XP-257](#); [Expression Home XP-302](#); [Expression Home XP-305](#); [Expression Home XP-312](#); [Expression Home XP-315](#); [Expression Home XP-322](#); [Expression Home XP-325](#); [Expression Home XP-332](#); [Expression Home XP-335](#); [Expression Home XP-342](#); [Expression Home XP-345](#); [Expression Home XP-352](#); [Expression Home XP-355](#); [Expression Home XP-402](#); [Expression Home XP-405](#); [Expression Home XP-405WH](#); [Expression Home XP-412](#); [Expression Home XP-415](#); [Expression Home XP-422](#); [Expression Home XP-425](#); [Expression Home XP-432](#); [Expression Home XP-435](#); [Expression Home XP-442](#); [Expression Home XP-445](#); [Expression Home XP-452](#); [Expression Home XP-455](#); [Expression Home XP-2100](#); [Expression Home XP-2105](#); [Expression Home XP-2150](#); [Expression Home XP-2155](#); [Expression Home XP-2200](#); [Expression Home XP-2205](#); [Expression Home XP-3100](#); [Expression Home XP-3105](#); [Expression Home XP-3150](#); [Expression Home XP-3155](#); [Expression Home XP-3200](#); [Expression Home XP-3205](#); [Expression Home XP-4100](#); [Expression Home XP-4105](#); [Expression Home XP-4150](#); [Expression Home XP-4155](#); [Expression Home XP-4200](#); [Expression Home XP-5100](#); [Expression Home XP-5105](#); [Expression Home XP-5115](#); [Expression Home XP-5150](#); [Expression Home XP-5155](#).

EXPRESSION PHOTO XP

[Expression Photo HD XP-15000](#); [Expression Photo XP-55](#); [Expression Photo XP-750](#); [Expression Photo XP-760](#); [Expression Photo XP-850](#); [Expression Photo XP-860](#); [Expression Photo XP-950](#); [Expression Photo XP-960](#); [Expression Photo XP-970](#); [Expression Photo XP-8500](#); [Expression Photo XP-8500 Small-in-One](#); [Expression Photo XP-8505](#); [Expression Photo XP-8600](#); [Expression Photo XP-8605](#); [Expression Photo XP-8606](#); [Expression Photo XP-8700](#).

EXPRESSION PREMIUM XP

[Expression Premium XP-510](#); [Expression Premium XP-520](#); [Expression Premium XP-530](#); [Expression Premium XP-540](#); [Expression Premium XP-540 Media Bundle](#); [Expression Premium XP-600](#); [Expression Premium XP-605](#); [Expression Premium XP-610](#); [Expression Premium XP-615](#); [Expression Premium XP-620](#); [Expression Premium XP-625](#); [Expression Premium XP-630](#); [Expression Premium XP-635](#); [Expression Premium XP-640](#); [Expression Premium XP-645](#); [Expression Premium XP-700](#); [Expression Premium XP-710](#); [Expression Premium XP-720](#); [Expression Premium XP-800](#); [Expression Premium XP-810](#); [Expression Premium XP-820](#); [Expression Premium XP-830](#); [Expression Premium XP-830 Stickers](#); [Expression Premium XP-900](#); [Expression Premium XP-900 Stickers](#); [Expression Premium XP-6000](#); [Expression Premium XP-6005](#); [Expression Premium XP-6100](#); [Expression Premium XP-6105](#); [Expression Premium XP-7100](#).

STYLUS

[Stylus 78](#); [Stylus 91](#); [Stylus 92](#); [Stylus CX4300](#); [Stylus D120](#); [Stylus D120 Network Edition](#); [Stylus D120 Professional Edition](#); [Stylus DX4000](#); [Stylus DX4050](#); [Stylus DX4400](#); [Stylus DX4450](#); [Stylus DX5000](#); [Stylus DX5050](#); [Stylus DX6000](#); [Stylus DX6050](#); [Stylus DX7000F](#); [Stylus DX7400](#); [Stylus DX7450](#); [Stylus DX8400](#); [Stylus DX8450](#); [Stylus DX9400 WiFi Edition](#); [Stylus DX9400F](#); [Stylus Office B40W](#); [Stylus Office B42WD](#); [Stylus Office BX300F](#); [Stylus Office BX310FN](#); [Stylus Office BX305F](#); [Stylus Office BX305FW](#); [Stylus Office BX305FW Plus](#); [Stylus Office BX320FW](#); [Stylus Office BX525WD](#); [Stylus Office BX535WD](#); [Stylus Office BX600FW](#); [Stylus Office BX610FW](#); [Stylus Office BX620FWD](#); [Stylus Office BX625FWD](#); [Stylus Office BX625FWD Pro Edition](#); [Stylus Office BX630FW](#); [Stylus Office BX635FWD](#); [Stylus Office BX925FWD](#); [Stylus Office BX935FWD](#); [Stylus Office BX3450F](#); [Stylus S20](#); [Stylus S21](#); [Stylus SX100](#); [Stylus SX105](#); [Stylus SX110](#); [Stylus SX115](#); [Stylus SX200](#); [Stylus SX205](#); [Stylus SX209](#); [Stylus SX210](#); [Stylus SX215](#); [Stylus SX218](#); [Stylus SX230](#); [Stylus SX235W](#); [Stylus SX400](#); [Stylus SX400 WiFi Edition](#); [Stylus SX405](#); [Stylus SX405 WiFi Edition](#); [Stylus SX410](#); [Stylus SX415](#); [Stylus SX420W](#); [Stylus SX425W](#); [Stylus SX430W](#); [Stylus SX435W](#); [Stylus SX438W](#); [Stylus SX440W](#); [Stylus SX445W](#); [Stylus SX510W](#); [Stylus SX515W](#); [Stylus SX525WD](#); [Stylus SX535WD](#); [Stylus SX600FW](#); [Stylus SX610FW](#); [Stylus SX620FW](#).

WF

[WF 2010W](#); [WF 2510WF](#); [WF 2520NF](#); [WF 2530WF](#); [WF 2540WF](#); [WF 2630WF](#); [WF 2650DWF](#); [WF 2660DWF](#); [WF 2750DWF](#); [WF 2760DWF](#); [WF 2810DWF](#); [WF 2820DWF](#); [WF 2830DWF](#); [WF 2835DWF](#); [WF 2840DWF](#); [WF 2845DWF](#); [WF 2850DWF](#); [WF 2860DWF](#); [WF 2865DWF](#); [WF 2870DWF](#); [WF 2880DWF](#); [WF 2885DWF](#); [WorkForce WF-2860DWF](#); [WF 3010DW](#); [WF 3520DWF](#); [WF 3530DTWF](#); [WF 3540DTWF](#); [WF 3620DWF](#); [WF 3620DWF Stickers](#); [WF 3640DTWF](#); [WF 3720DW](#); [WF 3720DWF](#); [WF 3725DWF](#); [WF 3820DWF](#); [WF 3825DWF](#); [WF 4720DWF](#); [WF 4725DWF](#); [WF 4730DTWF](#); [WF 4735DTWF](#); [WF 4740DTWF](#); [WF 4820DWF](#); [WF 4825DWF](#); [WF 4830DTWF](#); [WF 7015](#); [WF 7110DTW](#); [WF 7210DTW](#); [WF 7310DTW](#); [WF 7515](#); [WF 7525](#); [WF 7610DWF](#); [WF 7620DTWF](#); [WF 7710DWF](#); [WF 7715DWF](#); [WF 7720DTWF](#); [WF 7830DTWF](#); [WF 7835DTWF](#); [WF 7840DTWF](#).

WORKFORCE

[WorkForce WF-2810DWF](#); [WorkForce WF-2820DWF](#); [WorkForce WF-2830DWF](#); [WorkForce WF2835-DWF](#); [WorkForce WF-2840DWF](#); [WorkForce WF-2845DWF](#); [WorkForce WF-2850DWF](#); [WorkForce WF-2865DWF](#); [WorkForce WF-2870DWF](#); [WorkForce WF-2880DWF](#); [WorkForce WF-2885DWF](#); [WF 2910DWF](#); [WF 2930DWF](#); [WF 2935DWF](#); [WF 2950DWF](#); [WorkForce WF-2910DWF](#); [WorkForce WF-2930DWF](#); [WorkForce WF-2935DWF](#); [WorkForce WF-2950DWF](#); [WorkForce WF-3010DW](#); [WorkForce WF-3030DTWF](#); [WorkForce WF-3040DTWF](#); [WorkForce WF-3520DWF](#); [WorkForce WF-3620DWF](#); [WorkForce WF-3620DWF Stickers](#); [WorkForce WF-3640DTWF](#); [WorkForce WF-7015](#); [WorkForce WF-7110DTW](#); [WorkForce WF-7210DTW](#); [WorkForce WF-7515](#); [WorkForce WF-7525](#); [WorkForce WF-7610DWF](#); [WorkForce WF-7620DTWF](#); [WorkForce WF-7710DWF](#); [WorkForce WF-7715DWF](#); [WorkForce WF-7720DTWF](#).

WORKFORCE PRO

[WorkForce Pro 3725DWF](#); [WorkForce Pro WF3720DW](#); [WorkForce Pro WF3720DWF](#); [WorkForce Pro WF-3820DWF](#); [WorkForce Pro WF-3825DWF](#); [WorkForce Pro WF4720DWF](#); [WorkForce Pro WF4725DWF](#); [WorkForce Pro WF4730DTWF](#); [WorkForce Pro WF4735DTWF](#); [WorkForce Pro WF4740DTWF](#); [WorkForce Pro WF-4820DWF](#); [WorkForce Pro WF-4825DWF](#); [WorkForce Pro WF-4830DTWF](#); [WorkForce Pro WF-7310DTW](#); [WorkForce Pro WF-7830DTWF](#); [WorkForce Pro WF-7835DTWF](#); [WorkForce Pro WF-7840DTWF](#).

XP

[XP 30](#); [XP 55](#); [XP 102](#); [XP 202](#); [XP 205](#); [XP 212](#); [XP 215](#); [XP 225](#); [XP 235](#); [XP 245](#); [XP 247](#); [XP 255](#); [XP 257](#); [XP 302](#); [XP 305](#); [XP 312](#); [XP 315](#); [XP 322](#); [XP 325](#); [XP 332](#); [XP 335](#); [XP 342](#); [XP 345](#); [XP 352](#); [XP 355](#); [XP 402](#); [XP 405](#); [XP 405WH](#); [XP 412](#); [XP 415](#); [XP 422](#); [XP 425](#); [XP 432](#); [XP 435](#); [XP 442](#); [XP 445](#); [XP 452](#); [XP 455](#); [XP 510](#); [XP 520](#); [XP 530](#); [XP 540](#); [XP 540 Media Bundle](#); [XP 600](#); [XP 605](#); [XP 610](#); [XP 615](#); [XP 620](#); [XP 625](#); [XP 630](#); [XP 635](#); [XP 640](#); [XP 645](#); [XP 700](#); [XP 710](#); [XP 720](#); [XP 750](#); [XP 760](#); [XP 800](#); [XP 810](#); [XP 820](#); [XP 830](#); [XP 830 Stickers](#); [XP 850](#); [XP 860](#); [XP 900](#); [XP 900 Stickers](#); [XP 950](#); [XP 960](#); [XP 970](#); [XP 2100](#); [XP 2105](#); [XP 2150](#); [XP 2155](#); [XP 2200](#); [XP 2205](#); [XP 3100](#); [XP 3105](#); [XP 3150](#); [XP 3155](#); [XP 3200](#); [XP 3205](#); [XP 4100](#); [XP 4105](#); [XP 4150](#); [XP 4155](#); [XP 4200](#); [XP 5100](#); [XP 5105](#); [XP 5115](#); [XP 5150](#); [XP 5155](#); [XP 6000](#); [XP 6005](#); [XP 6100](#); [XP 6105](#); [XP 7100](#); [XP 8500](#); [XP 8500 Small-in-One](#); [XP 8505](#); [XP 8600](#); [XP 8605](#); [XP 8606](#); [XP 8700](#); [XP 15000](#).

COMPATIBLES



ORIGINALES



WF 2010W; WF 2510WF; WF 2520NF; WF 2530WF; WF 2540WF; WF 2630WF; WF 2650DWF; WF 2660DWF; WF 2750DWF; WF 2760DWF.

COMPATIBLES



ORIGINALES

 
 


Expression Home XP-102; Expression Home XP-202; Expression Home XP-205; Expression Home XP-212; Expression Home XP-215; Expression Home XP-225; Expression Home XP-30; Expression Home XP-302; Expression Home XP-305; Expression Home XP-312; Expression Home XP-315; Expression Home XP-322; Expression Home XP-325; Expression Home XP-402; Expression Home XP-405; Expression Home XP-405WH; Expression Home XP-412; Expression Home XP-415; Expression Home XP-422; Expression Home XP-425; XP 102; XP 202; XP 205; XP 212; XP 215; XP 225; XP 30; XP 302; XP 305; XP 312; XP 315; XP 322; XP 325; XP 402; XP 405; XP 405WH; XP 412; XP 415; XP 422; XP 425.

COMPATIBLES



ORIGINALES

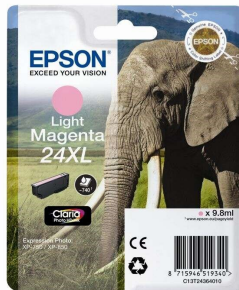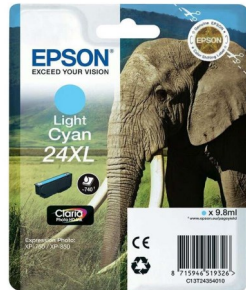

Expression Photo XP-55; Expression Photo XP-750; Expression Photo XP-760; Expression Photo XP-850; Expression Photo XP-860; Expression Photo XP-950; Expression Photo XP-960; Expression Photo XP-970; XP 55; XP 750; XP 760; XP 850; XP 860; XP 950; XP 960; XP 970.



COMPATIBLES



ORIGINALES



Expression Premium XP-510; Expression Premium XP-520; Expression Premium XP-600; Expression Premium XP-605; Expression Premium XP-610; Expression Premium XP-615; Expression Premium XP-620; Expression Premium XP-625; Expression Premium XP-700; Expression Premium XP-710; Expression Premium XP-720; Expression Premium XP-800; Expression Premium XP-810; Expression Premium XP-820; XP 510; XP 520; XP 600; XP 605; XP 610; XP 615; XP 620; XP 625; XP 700; XP 710; XP 720; XP 800; XP 810; XP 820.



COMPATIBLES



ORIGINALES



WF 3620DWF; WF 3620DWF Stickers; WF 3640DTWF; WF 7110DTW; WF 7210DTW; WF 7610DWF; WF 7620DTWF; WF 7710DWF; WF 7715DWF; WF 7720DTWF; WorkForce WF-3620DWF; WorkForce WF-3620DWF Stickers; WorkForce WF-3640DTWF; WorkForce WF-7110DTW; WorkForce WF-7210DTW; WorkForce WF-7610DWF; WorkForce WF-7620DTWF; WorkForce WF-7710DWF; WorkForce WF-7715DWF; WorkForce WF-7720DTWF.

COMPATIBLES



ORIGINALES



Stylus Office B42WD; Stylus Office BX305F; Stylus Office BX305FW; Stylus Office BX305FW Plus; Stylus Office BX320FW; Stylus Office BX525WD; Stylus Office BX535WD; Stylus Office BX620FWD; Stylus Office BX625FWD; Stylus Office BX625FWD Pro Edition; Stylus Office BX630FW; Stylus Office BX635FWD; Stylus Office BX925FWD; Stylus Office BX935FWD; Stylus SX230; Stylus SX235W; Stylus SX420W; Stylus SX425W; Stylus SX430W; Stylus SX435W; Stylus SX438W; Stylus SX440W; Stylus SX445W; Stylus SX525WD; Stylus SX535WD; Stylus SX620FW; WF 3010DW; WF 3520DWF; WF 3530DTWF; WF 3540DTWF; WF 7015; WF 7515; WF 7525; WorkForce WF-3010DW; WorkForce WF-3030DTWF; WorkForce WF-3040DTWF; WorkForce WF-3520DWF; WorkForce WF-7015; WorkForce WF-7515; WorkForce WF-7525.

COMPATIBLES



ORIGINALES



Expression Premium XP-530; Expression Premium XP-540; Expression Premium XP-540 Media Bundle; Expression Premium XP-630; Expression Premium XP-635; Expression Premium XP-640; Expression Premium XP-645; Expression Premium XP-7100; Expression Premium XP-830; Expression Premium XP-830 Stickers; Expression Premium XP-900; Expression Premium XP-900 Stickers; XP 530; XP 540; XP 540 Media Bundle; XP 630; XP 635; XP 640; XP 645; XP 7100; XP 830; XP 830 Stickers; XP 900; XP 900 Stickers.

COMPATIBLES



ORIGINALES



WF 3720DW; WF 3720DWF; WF 3725DWF; WorkForce Pro 3725DWF; WorkForce Pro WF3720DW; WorkForce Pro WF3720DWF.

COMPATIBLES



ORIGINALES



WF 4720DWF; WF 4725DWF; WF 4730DTWF; WF 4735DTWF; WF 4740DTWF; WorkForce Pro WF4720DWF; WorkForce Pro WF4725DWF; WorkForce Pro WF4730DTWF; WorkForce Pro WF4735DTWF; WorkForce Pro WF4740DTWF.

COMPATIBLES



ORIGINALES



Expression Premium XP-6000; Expression Premium XP-6005; Expression Premium XP-6100; Expression Premium XP-6105; XP 6000; XP 6005; XP 6100; XP 6105.



COMPATIBLES



*Excepto modelos Expression Photo HD XP15000 y XP 15000

ORIGINALES



*
*Excepto modelos Expression Photo HD XP15000 y XP 15000



Expression Photo HD XP-15000; Expression Photo XP-8500; Expression Photo XP-8500 Small-in-One; Expression Photo XP-8505; Expression Photo XP-8600; Expression Photo XP-8605; Expression Photo XP-8606; Expression Photo XP-8700; XP 15000; XP 8500; XP 8500 Small-in-One; XP 8505; XP 8600; XP 8605; XP 8606; XP 8700.

COMPATIBLES



ORIGINALES

 


WF 3820DWF; WF 3825DWF; WF 4820DWF; WF 4825DWF; WF 4830DTWF; WF 7310DTW; WF 7830DTWF; WF 7835DTWF; WF 7840DTWF; WorkForce Pro WF-3820DWF; WorkForce Pro WF-3825DWF; WorkForce Pro WF-4820DWF; WorkForce Pro WF-4825DWF; WorkForce Pro WF-4830DTWF; WorkForce Pro WF-7310DTW; WorkForce Pro WF-7830DTWF; WorkForce Pro WF-7835DTWF; WorkForce Pro WF-7840DTWF.

COMPATIBLES



ORIGINALES

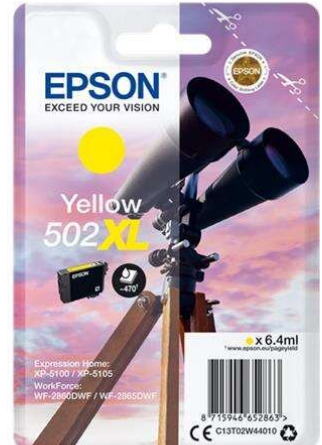


Expression Home XP-5100; Expression Home XP-5105; Expression Home XP-5115; Expression Home XP-5150; Expression Home XP-5155; WF 2860DWF; WF 2865DWF; WF 2880DWF; WF 2885DWF; WorkForce WF-2860DWF; WorkForce WF-2865DWF; WorkForce WF-2880DWF; WorkForce WF-2885DWF; XP 5100; XP 5105; XP 5115; XP 5150; XP 5155.

COMPATIBLES



 ORIGINALES

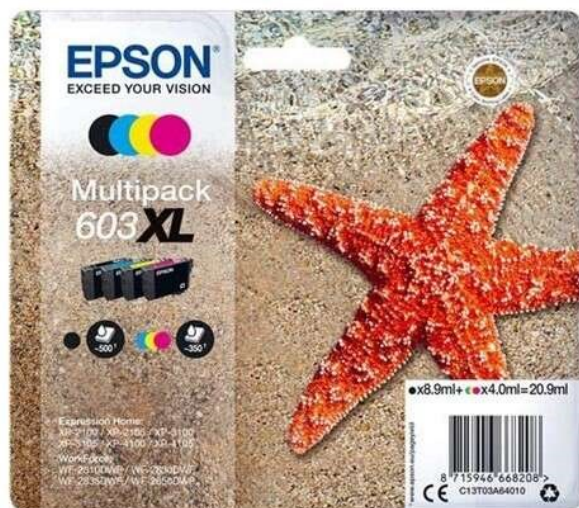

Expression Home XP-2100; Expression Home XP-2105; Expression Home XP-2150; Expression Home XP-2155; Expression Home XP-3100; Expression Home XP-3105; Expression Home XP-3150; Expression Home XP-3155; Expression Home XP-4100; Expression Home XP-4105; Expression Home XP-4150; Expression Home XP-4155; WF 2810DWF; WF 2820DWF; WF 2830DWF; WF 2835DWF; WF 2840DWF; WF 2845DWF; WF 2850DWF; WF 2870DWF; WorkForce WF-2810DWF; WorkForce WF-2820DWF; WorkForce WF-2830DWF; WorkForce WF-2840DWF; WorkForce WF-2845DWF; WorkForce WF-2850DWF; WorkForce WF-2870DWF; WorkForce WF2835-DWF; XP 2100; XP 2105; XP 2150; XP 2155; XP 3100; XP 3105; XP 3150; XP 3155; XP 4100; XP 4105; XP 4150; XP 4155.

COMPATIBLES



ORIGINALES



Expression Home XP-2200; Expression Home XP-2205; Expression Home XP-3200; Expression Home XP-3205; Expression Home XP-4200; WF 2910DWF; WF 2930DWF; WF 2935DWF; WF 2950DWF; WorkForce WF-2910DWF; WorkForce WF-2930DWF; WorkForce WF-2935DWF; WorkForce WF-2950DWF; XP 2200; XP 2205; XP 3200; XP 3205; XP 4200.

COMPATIBLES



ORIGINALES



Stylus 78; Stylus 91; Stylus 92; Stylus CX4300; Stylus D120; Stylus D120 Network Edition; Stylus D120 Professional Edition; Stylus DX4000; Stylus DX4050; Stylus DX4400; Stylus DX4450; Stylus DX5000; Stylus DX5050; Stylus DX6000; Stylus DX6050; Stylus DX7000F; Stylus DX7400; Stylus DX7450; Stylus DX8400; Stylus DX8450; Stylus DX9400 WiFi Edition; Stylus DX9400F; Stylus Office B40W; Stylus Office BX300F; Stylus Office BX310FN; Stylus Office BX3450F; Stylus Office BX600FW; Stylus Office BX610FW; Stylus S20; Stylus S21; Stylus SX100; Stylus SX105; Stylus SX110; Stylus SX115; Stylus SX200; Stylus SX205; Stylus SX209; Stylus SX210; Stylus SX215; Stylus SX218; Stylus SX400; Stylus SX400 WiFi Edition; Stylus SX405; Stylus SX405 WiFi Edition; Stylus SX410; Stylus SX415; Stylus SX510W; Stylus SX515W; Stylus SX600FW; Stylus SX610FW.

COMPATIBLES



ORIGINALES



 
**También sirven los T1291, T1292, T1293, T1294*

Stylus Office BX305F; Stylus Office BX305FW; Stylus Office BX305FW Plus; Stylus S22; Stylus SX125; Stylus SX130; Stylus SX230; Stylus SX235W; Stylus SX420W; Stylus SX425W; Stylus SX430W; Stylus SX435W; Stylus SX438W; Stylus SX440W; Stylus SX445W.

COMPATIBLES



ORIGINALES

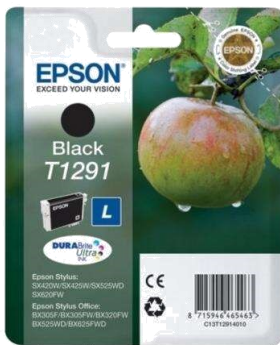

**También sirven los T1281, T1282, T1283, T1284*

Stylus Office B42WD; Stylus Office BX305F; Stylus Office BX305FW; Stylus Office BX305FW Plus; Stylus Office BX320FW; Stylus Office BX525WD; Stylus Office BX535WD; Stylus Office BX620FWD; Stylus Office BX625FWD; Stylus Office BX625FWD Pro Edition; Stylus Office BX630FW; Stylus Office BX635FWD; Stylus Office BX925FWD; Stylus Office BX935FWD; Stylus SX230; Stylus SX235W; Stylus SX420W; Stylus SX425W; Stylus SX430W; Stylus SX435W; Stylus SX438W; Stylus SX440W; Stylus SX445W; Stylus SX525WD; Stylus SX535WD; Stylus SX620FW; WF 3010DW; WF 3520DWF; WF 3530DTWF; WF 3540DTWF; WF 7015; WF 7515; WF 7525; WorkForce WF-3010DW; WorkForce WF-3030DTWF; WorkForce WF-3040DTWF; WorkForce WF-3520DWF; WorkForce WF-7015; WorkForce WF-7515; WorkForce WF-7525.