



EXPRESSION HOME XP

[Expression Home XP-30](#); [Expression Home XP-102](#); [Expression Home XP-202](#); [Expression Home XP-205](#); [Expression Home XP-212](#); [Expression Home XP-215](#); [Expression Home XP-225](#); [Expression Home XP-235](#); [Expression Home XP-245](#); [Expression Home XP-247](#); [Expression Home XP-255](#); [Expression Home XP-257](#); [Expression Home XP-302](#); [Expression Home XP-305](#); [Expression Home XP-312](#); [Expression Home XP-315](#); [Expression Home XP-322](#); [Expression Home XP-325](#); [Expression Home XP-332](#); [Expression Home XP-335](#); [Expression Home XP-342](#); [Expression Home XP-345](#); [Expression Home XP-352](#); [Expression Home XP-355](#); [Expression Home XP-402](#); [Expression Home XP-405](#); [Expression Home XP-405WH](#); [Expression Home XP-412](#); [Expression Home XP-415](#); [Expression Home XP-422](#); [Expression Home XP-425](#); [Expression Home XP-432](#); [Expression Home XP-435](#); [Expression Home XP-442](#); [Expression Home XP-445](#); [Expression Home XP-452](#); [Expression Home XP-455](#); [Expression Home XP-2100](#); [Expression Home XP-2105](#); [Expression Home XP-2150](#); [Expression Home XP-2155](#); [Expression Home XP-2200](#); [Expression Home XP-2205](#); [Expression Home XP-3100](#); [Expression Home XP-3105](#); [Expression Home XP-3150](#); [Expression Home XP-3155](#); [Expression Home XP-3200](#); [Expression Home XP-3205](#); [Expression Home XP-4100](#); [Expression Home XP-4105](#); [Expression Home XP-4150](#); [Expression Home XP-4155](#); [Expression Home XP-4200](#).

EXPRESSION PHOTO XP

[Expression Photo XP-55](#); [Expression Photo XP-750](#); [Expression Photo XP-760](#); [Expression Photo XP-850](#); [Expression Photo XP-860](#); [Expression Photo XP-950](#); [Expression Photo XP-960](#); [Expression Photo XP-970](#).

STYLUS OFFICE

[Stylus Office B42WD](#); [Stylus Office BX305F](#); [Stylus Office BX305FW](#); [Stylus Office BX305FW Plus](#); [Stylus Office BX320FW](#); [Stylus Office BX525WD](#); [Stylus Office BX535WD](#); [Stylus Office BX620FWD](#); [Stylus Office BX625FWD](#); [Stylus Office BX625FWD Pro Edition](#); [Stylus Office BX630FW](#); [Stylus Office BX635FWD](#); [Stylus Office BX925FWD](#); [Stylus Office BX935FWD](#).

STYLUS SX

[Stylus SX230](#); [Stylus SX235W](#); [Stylus SX420W](#); [Stylus SX425W](#); [Stylus SX430W](#); [Stylus SX435W](#); [Stylus SX438W](#); [Stylus SX440W](#); [Stylus SX445W](#); [Stylus SX525WD](#); [Stylus SX535WD](#); [Stylus SX620FW](#).

WF

[WF 2010W](#); [WF 2510WF](#); [WF 2520NF](#); [WF 2530WF](#); [WF 2540WF](#); [WF 2630WF](#); [WF 2650DWF](#); [WF 2660DWF](#); [WF 2750DWF](#); [WF 2760DWF](#); [WF 2810DWF](#); [WF 2820DWF](#); [WF 2830DWF](#); [WF 2835DWF](#); [WF 2840DWF](#); [WF 2845DWF](#); [WF 2850DWF](#); [WF 2870DWF](#); [WF 3010DW](#); [WF 3520DWF](#); [WF 3530DTWF](#); [WF 3540DTWF](#); [WF 3620DWF](#); [WF 3620DWF Stickers](#); [WF 3640DTWF](#); [WF 7015](#); [WF 7110DTW](#); [WF 7210DTW](#); [WF 7515](#); [WF 7525](#); [WF 7610DWF](#); [WF 7620DTWF](#); [WF 7710DWF](#); [WF 7715DWF](#); [WF 7720DTWF](#).

WORKFORCE

[WorkForce WF-2810DWF](#); [WorkForce WF-2820DWF](#); [WorkForce WF-2830DWF](#); [WorkForce WF-2840DWF](#); [WorkForce WF-2845DWF](#); [WorkForce WF-2850DWF](#); [WorkForce WF-2870DWF](#); [WorkForce WF-2835-DWF](#); [WF 2910DWF](#); [WF 2930DWF](#); [WF 2935DWF](#); [WF 2950DWF](#); [WorkForce WF-2910DWF](#); [WorkForce WF-2930DWF](#); [WorkForce WF-2935DWF](#); [WorkForce WF-2950DWF](#); [WorkForce WF-3010DW](#); [WorkForce WF-3030DTWF](#); [WorkForce WF-3040DTWF](#); [WorkForce WF-3520DWF](#); [WorkForce WF-3620DWF](#); [WorkForce WF-3620DWF Stickers](#); [WorkForce WF-3640DTWF](#); [WorkForce WF-7015](#); [WorkForce WF-7110DTW](#); [WorkForce WF-7210DTW](#); [WorkForce WF-7515](#); [WorkForce WF-7525](#); [WorkForce WF-7610DWF](#); [WorkForce WF-7620DTWF](#); [WorkForce WF-7710DWF](#); [WorkForce WF-7715DWF](#); [WorkForce WF-7720DTWF](#).

XP

[XP 30](#); [XP 55](#); [XP 102](#); [XP 202](#); [XP 205](#); [XP 212](#); [XP 215](#); [XP 225](#); [XP 235](#); [XP 245](#); [XP 247](#); [XP 255](#); [XP 257](#); [XP 302](#); [XP 305](#); [XP 312](#); [XP 315](#); [XP 322](#); [XP 325](#); [XP 332](#); [XP 335](#); [XP 342](#); [XP 345](#); [XP 352](#); [XP 355](#); [XP 402](#); [XP 405](#); [XP 405WH](#); [XP 412](#); [XP 415](#); [XP 422](#); [XP 425](#); [XP 432](#); [XP 435](#); [XP 442](#); [XP 445](#); [XP 452](#); [XP 455](#); [XP 750](#); [XP 760](#); [XP 850](#); [XP 860](#); [XP 950](#); [XP 960](#); [XP 970](#); [XP 2100](#); [XP 2105](#); [XP 2150](#); [XP 2155](#); [XP 2200](#); [XP 2205](#); [XP 3100](#); [XP 3105](#); [XP 3150](#); [XP 3155](#); [XP 3200](#); [XP 3205](#); [XP 4100](#); [XP 4105](#); [XP 4150](#); [XP 4155](#); [XP 4200](#).

COMPATIBLES



ORIGINALES



WF 2010W; WF 2510WF; WF 2520NF; WF 2530WF; WF 2540WF; WF 2630WF; WF 2650DWF; WF 2660DWF; WF 2750DWF; WF 2760DWF.

COMPATIBLES



ORIGINALES

 
 


Expression Home XP-102; Expression Home XP-202; Expression Home XP-205; Expression Home XP-212; Expression Home XP-215; Expression Home XP-225; Expression Home XP-30; Expression Home XP-302; Expression Home XP-305; Expression Home XP-312; Expression Home XP-315; Expression Home XP-322; Expression Home XP-325; Expression Home XP-402; Expression Home XP-405; Expression Home XP-405WH; Expression Home XP-412; Expression Home XP-415; Expression Home XP-422; Expression Home XP-425; XP 102; XP 202; XP 205; XP 212; XP 215; XP 225; XP 30; XP 302; XP 305; XP 312; XP 315; XP 322; XP 325; XP 402; XP 405; XP 405WH; XP 412; XP 415; XP 422; XP 425.

COMPATIBLES



ORIGINALES

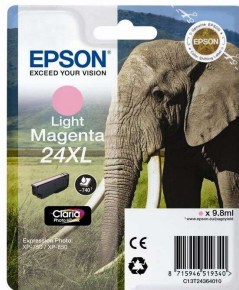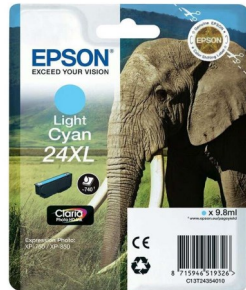

Expression Photo XP-55; Expression Photo XP-750; Expression Photo XP-760; Expression Photo XP-850; Expression Photo XP-860; Expression Photo XP-950; Expression Photo XP-960; Expression Photo XP-970; XP 55; XP 750; XP 760; XP 850; XP 860; XP 950; XP 960; XP 970.



COMPATIBLES



ORIGINALES



WF 3620DWF; WF 3620DWF Stickers; WF 3640DTWF; WF 7110DTW; WF 7210DTW; WF 7610DWF; WF 7620DTWF; WF 7710DWF; WF 7715DWF; WF 7720DTWF; WorkForce WF-3620DWF; WorkForce WF-3620DWF Stickers; WorkForce WF-3640DTWF; WorkForce WF-7110DTW; WorkForce WF-7210DTW; WorkForce WF-7610DWF; WorkForce WF-7620DTWF; WorkForce WF-7710DWF; WorkForce WF-7715DWF; WorkForce WF-7720DTWF.

COMPATIBLES



ORIGINALES

 


Stylus Office B42WD; Stylus Office BX305F; Stylus Office BX305FW; Stylus Office BX305FW Plus; Stylus Office BX320FW; Stylus Office BX525WD; Stylus Office BX535WD; Stylus Office BX620FWD; Stylus Office BX625FWD; Stylus Office BX625FWD Pro Edition; Stylus Office BX630FW; Stylus Office BX635FWD; Stylus Office BX925FWD; Stylus Office BX935FWD; Stylus SX230; Stylus SX235W; Stylus SX420W; Stylus SX425W; Stylus SX430W; Stylus SX435W; Stylus SX438W; Stylus SX440W; Stylus SX445W; Stylus SX525WD; Stylus SX535WD; Stylus SX620FW; WF 3010DW; WF 3520DWF; WF 3530DTWF; WF 3540DTWF; WF 7015; WF 7515; WF 7525; WorkForce WF-3010DW; WorkForce WF-3030DTWF; WorkForce WF-3040DTWF; WorkForce WF-3520DWF; WorkForce WF-7015; WorkForce WF-7515; WorkForce WF-7525.

COMPATIBLES



ORIGINALES

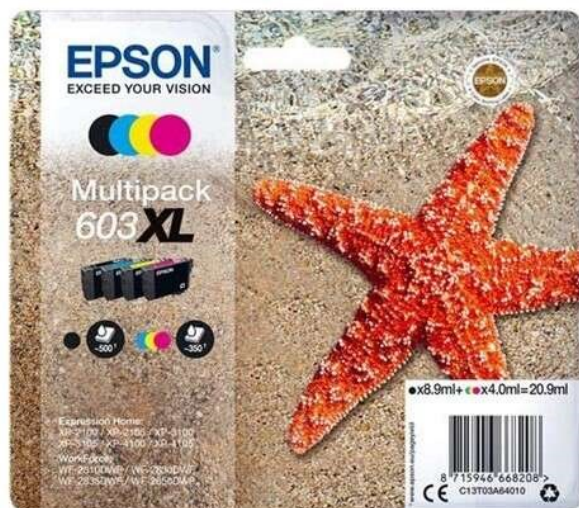

Expression Home XP-2100; Expression Home XP-2105; Expression Home XP-2150; Expression Home XP-2155; Expression Home XP-3100; Expression Home XP-3105; Expression Home XP-3150; Expression Home XP-3155; Expression Home XP-4100; Expression Home XP-4105; Expression Home XP-4150; Expression Home XP-4155; WF 2810DWF; WF 2820DWF; WF 2830DWF; WF 2835DWF; WF 2840DWF; WF 2845DWF; WF 2850DWF; WF 2870DWF; WorkForce WF-2810DWF; WorkForce WF-2820DWF; WorkForce WF-2830DWF; WorkForce WF-2840DWF; WorkForce WF-2845DWF; WorkForce WF-2850DWF; WorkForce WF-2870DWF; WorkForce WF2835-DWF; XP 2100; XP 2105; XP 2150; XP 2155; XP 3100; XP 3105; XP 3150; XP 3155; XP 4100; XP 4105; XP 4150; XP 4155.

COMPATIBLES



ORIGINALES

 


Expression Home XP-2200; Expression Home XP-2205; Expression Home XP-3200; Expression Home XP-3205; Expression Home XP-4200; WF 2910DWF; WF 2930DWF; WF 2935DWF; WF 2950DWF; WorkForce WF-2910DWF; WorkForce WF-2930DWF; WorkForce WF-2935DWF; WorkForce WF-2950DWF; XP 2200; XP 2205; XP 3200; XP 3205; XP 4200.

COMPATIBLES



ORIGINALES

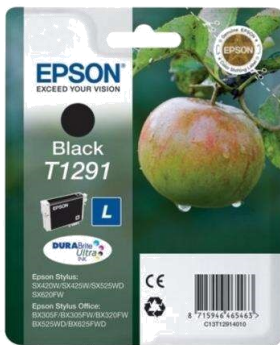

**También sirven los T1281, T1282, T1283, T1284*

Stylus Office B42WD; Stylus Office BX305F; Stylus Office BX305FW; Stylus Office BX305FW Plus; Stylus Office BX320FW; Stylus Office BX525WD; Stylus Office BX535WD; Stylus Office BX620FWD; Stylus Office BX625FWD; Stylus Office BX625FWD Pro Edition; Stylus Office BX630FW; Stylus Office BX635FWD; Stylus Office BX925FWD; Stylus Office BX935FWD; Stylus SX230; Stylus SX235W; Stylus SX420W; Stylus SX425W; Stylus SX430W; Stylus SX435W; Stylus SX438W; Stylus SX440W; Stylus SX445W; Stylus SX525WD; Stylus SX535WD; Stylus SX620FW; WF 3010DW; WF 3520DWF; WF 3530DTWF; WF 3540DTWF; WF 7015; WF 7515; WF 7525; WorkForce WF-3010DW; WorkForce WF-3030DTWF; WorkForce WF-3040DTWF; WorkForce WF-3520DWF; WorkForce WF-7015; WorkForce WF-7515; WorkForce WF-7525.