



IMPRESORAS DE INYECCIÓN DE TINTA

IMPRESORAS DE INYECCIÓN DE TINTA

BUSINESS INKJET

[Business InkJet 1000](#); [Business InkJet 1100](#); [Business InkJet 1100d](#); [Business InkJet 1100DTN](#); [Business InkJet 1200](#); [Business InkJet 1200d](#); [Business InkJet 1200dn](#); [Business InkJet 1200dtn](#); [Business InkJet 1200dtw](#); [Business InkJet 2000](#); [Business InkJet 2000cn](#); [Business InkJet 2200](#); [Business InkJet 2230](#); [Business InkJet 2250](#); [Business InkJet 2250tn](#); [Business InkJet 2280](#); [Business InkJet 2280tn](#); [Business InkJet 2300](#); [Business InkJet 2300dtn](#); [Business InkJet 2300n](#); [Business InkJet 2500c](#); [Business InkJet 2500cm](#); [Business InkJet 2600](#); [Business InkJet 2600dn](#); [Business InkJet 2800](#); [Business InkJet 2800dt](#); [Business InkJet 2800dtn](#); [Business InkJet 3000](#); [Business InkJet 3000DTN](#); [Business InkJet 3000N](#).

COLOR COPIER

[Color Copier 110](#); [Color Copier 120](#); [Color Copier 140](#); [Color Copier 145](#); [Color Copier 150](#); [Color Copier 155](#); [Color Copier 160](#); [Color Copier 170](#); [Color Copier 180](#); [Color Copier 190](#); [COLOR COPIER 210](#); [Color Copier 210LX](#); [Color Copier 260](#); [Color Copier 270](#); [Color Copier 280](#); [Color Copier 290](#); [Color Copier 310](#).

COLOR INKJET

[Color Inkjet CP 1700](#).

DESIGNJET

[DesignJet 100](#); [DesignJet 100+](#); [DesignJet 110](#); [DesignJet 110+](#); [DesignJet 500](#); [DesignJet 70](#); [DESIGNJET 700](#); [DESIGNJET 750C](#); [DESIGNJET 750C+](#); [DESIGNJET 755CM](#); [DesignJet 800](#); [DesignJet 800ps](#); [DesignJet 815mfp](#); [DesignJet 820mfp](#); [DesignJet ColorPro CAD](#); [DesignJet ColorPro GA](#); [DeskJet 2000C](#); [DeskJet 2500C](#).

DESKJET

[Deskjet 450](#); [DeskJet 450cbi](#); [DeskJet 450ci](#); [Deskjet 450wb](#); [DeskJet 460](#); [DeskJet 460c](#); [DeskJet 460cb](#); [DeskJet 460wb](#); [Deskjet 460wf](#); [DESKJET 710C](#); [DESKJET 712C](#); [DeskJet 720c](#); [Deskjet 722](#); [Deskjet 722c](#); [DeskJet 770c](#); [DeskJet 810C](#); [Deskjet 812C](#); [Deskjet 814C](#); [DeskJet 815c](#); [DeskJet 816c](#); [DeskJet 820cxi](#); [Deskjet 825c](#); [Deskjet 825CVR](#); [DeskJet 830c](#); [Deskjet 840c](#); [DeskJet 841c](#); [DeskJet 842c](#); [Deskjet 843c](#); [Deskjet 845c](#); [Deskjet 845CVR](#); [Deskjet 850c](#); [DeskJet 855c](#); [Deskjet 870cxi](#); [DeskJet 880c](#); [DeskJet 882C](#); [DeskJet 890c](#); [Deskjet 890cse](#); [Deskjet 890cxi](#); [Deskjet 895c](#); [Deskjet 895cse](#); [DeskJet 895cxi](#); [DeskJet 916c](#); [DeskJet 920c](#); [Deskjet 920CVR](#); [Deskjet 920CXI](#); [DeskJet 924c](#); [DESKJET 930C](#); [DESKJET 930CM](#); [DeskJet 932c](#); [DeskJet 935c](#); [DeskJet 940c](#); [Deskjet 940CVR](#); [DeskJet 948c](#); [DeskJet 950c](#); [DeskJet 952c](#); [DeskJet 955c](#); [DeskJet 959c](#); [DeskJet 960c](#); [Deskjet 970cse](#); [DeskJet 970cxi](#); [DESKJET 980C](#); [DeskJet 980cxi](#); [Deskjet 990c](#); [DeskJet 990cm](#); [DeskJet 990cxi](#); [DeskJet 995](#); [DESKJET 995C](#); [Deskjet 1000](#); [DESKJET 1000C](#); [Deskjet 1000 J110A](#); [Deskjet 1010](#); [DeskJet 1050](#); [DeskJet 1050a](#); [Deskjet 1055](#); [DeskJet 1100c](#); [Deskjet 1110](#); [Deskjet 1112](#); [DeskJet 1120c](#); [Deskjet 1120cse](#); [Deskjet 1120cxi](#); [Deskjet 1120xi](#); [DeskJet 1125c](#); [DeskJet 1180c](#); [Deskjet 1210](#); [Deskjet 1212](#); [DeskJet 1220](#); [DESKJET 1220C](#); [DESKJET 1220PS](#); [Deskjet 1255](#); [DeskJet 1280](#); [Deskjet 1510 All-in-One](#); [Deskjet 1512 All-in-One](#); [Deskjet 1513 All-in-One](#); [Deskjet 1514](#); [DESKJET 1600C](#); [DESKJET 1600CM](#); [Deskjet 2000](#); [DeskJet 2050](#); [DeskJet 2050 All-in-One](#); [DeskJet 2050a](#); [DeskJet 2050A All-in-One](#); [DeskJet 2050S](#); [DeskJet 2050se](#); [DeskJet 2054a](#); [DeskJet 2054A All-in-One](#); [Deskjet 2100 series](#); [Deskjet 2130 All-in-One](#); [Deskjet 2132 All-in-One](#); [Deskjet 2133](#); [Deskjet 2134 All-in-One](#); [DeskJet 2510](#); [DeskJet 2510 All-in-One](#); [Deskjet 2511](#); [Deskjet 2512](#); [DeskJet 2514](#); [DeskJet 2514 All-in-one](#); [Deskjet 2540 All-in-One](#); [Deskjet 2541](#); [Deskjet 2542 All-in-One](#); [Deskjet 2543](#); [DeskJet 2544 All-in-One](#); [Deskjet 2545](#); [Deskjet 2546](#); [Deskjet 2547](#); [DeskJet 2548](#); [DeskJet 2549 All-in-One](#); [Deskjet 2550](#); [Deskjet 2600](#); [Deskjet 2620](#); [Deskjet 2621](#); [Deskjet 2622](#); [Deskjet 2623](#); [Deskjet 2624](#); [Deskjet 2630](#); [Deskjet 2632](#); [Deskjet 2633](#); [Deskjet 2634](#); [Deskjet 2635](#); [Deskjet 2652](#); [Deskjet 2655](#); [Deskjet 2710](#); [Deskjet 2720](#); [Deskjet 2720e](#); [Deskjet 2721](#); [Deskjet 2721e](#); [Deskjet 2722](#); [Deskjet 2722e](#); [Deskjet 2723](#); [Deskjet 2723e](#); [Deskjet 2724](#); [Deskjet 2724e](#); [Deskjet 2732](#); [Deskjet 2732e](#); [Deskjet 2752](#); [Deskjet 2752e](#); [Deskjet 2755](#); [Deskjet 2755e](#); [Deskjet 2810e](#); [Deskjet 2820e](#); [Deskjet 2821e](#); [Deskjet 2822e](#); [Deskjet 2823e](#); [Deskjet 3000](#); [Deskjet 3000 J310A](#); [DeskJet 3050](#); [DeskJet 3050 All-in-One](#); [DeskJet 3050a](#); [DeskJet 3050A e-All-in-One](#); [DeskJet 3050se](#); [DeskJet 3050ve](#); [DeskJet 3052](#); [DeskJet 3052a](#); [DeskJet 3054](#); [DeskJet 3054a](#); [Deskjet 3055](#); [DeskJet 3055A](#); [DeskJet 3055A All-in-One](#); [Deskjet 3056A](#); [DeskJet 3057A](#); [DeskJet 3057A All-in-One](#); [DeskJet 3059A](#); [DeskJet 3070A](#); [Deskjet 3300](#); [DeskJet 3320](#); [Deskjet 3322](#); [Deskjet 3323](#); [DeskJet 3325](#); [DeskJet 3420 series](#); [DeskJet 3425](#); [Deskjet 3450](#); [DeskJet 3520](#); [Deskjet 3520v](#); [Deskjet 3520 e-All-in-One](#); [DeskJet 3522](#); [DeskJet 3524](#); [DeskJet 3535](#); [DeskJet 3550](#); [DeskJet 3550v](#); [DeskJet 3558](#); [Deskjet 3600](#); [DeskJet 3620](#); [Deskjet 3620v](#); [Deskjet 3630 All-in-One](#); [Deskjet 3631](#); [Deskjet 3632](#); [Deskjet 3633 All-in-One](#); [Deskjet 3634](#); [Deskjet 3635 All-in-One](#); [Deskjet 3636 All-in-One](#); [Deskjet 3637](#); [Deskjet 3638](#); [Deskjet 3639](#); [Deskjet 3645](#); [DeskJet 3647](#); [DeskJet 3650](#); [DeskJet 3650v](#); [Deskjet 3651](#); [DeskJet 3653](#); [DeskJet 3658](#); ...

CONTINÚA EN LA SIGUIENTE PÁGINA

DESKJET

[DeskJet D1311](#); [DeskJet D1320](#); [DeskJet D1330](#); [DeskJet D1341](#); [DeskJet D1360](#); [DeskJet D1368](#); [DeskJet D1400](#); [DeskJet D1415](#); [DeskJet D1420](#); [DeskJet D1430](#); [DeskJet D1445](#); [DeskJet D1455](#); [DeskJet D1460](#); [DeskJet D1468](#); [DeskJet D1470](#); [DeskJet D1500](#); [DeskJet D1520](#); [DeskJet D1530](#); [DeskJet D1550](#); [DeskJet D1558](#); [DeskJet D1560](#); [DeskJet D1568](#); [DeskJet D1600](#); [DeskJet D1660](#); [DeskJet D1663](#); [DeskJet D2320](#); [DeskJet D2330](#); [DeskJet D2345](#); [DeskJet D2360](#); [DeskJet D2368](#); [DeskJet D2400](#); [DeskJet D2430](#); [DeskJet D2445](#); [DeskJet D2460](#); [DeskJet D2500](#); [DeskJet D2530](#); [DeskJet D2545](#); [DeskJet D2560](#); [DeskJet D2563](#); [DeskJet D2566](#); [DeskJet D2568](#); [DeskJet D2600](#); [DeskJet D2660](#); [DeskJet D2663](#); [DeskJet D2666](#); [DeskJet D2668](#); [DeskJet D2680](#); [DeskJet D4160](#); [DeskJet D4163](#); [DeskJet D4200](#); [DeskJet D4245](#); [DeskJet D4260](#); [DeskJet D4263](#); [DeskJet D4268](#); [DeskJet D4300](#); [DeskJet D4360](#); [DeskJet D4363](#); [DeskJet D4368](#); [DeskJet D5500](#); [DeskJet D5560](#); [DeskJet D5563](#); [DeskJet F300](#); [DeskJet F310](#); [DeskJet F325](#); [DeskJet F335](#); [DeskJet F340](#); [DeskJet F350](#); [DeskJet F370](#); [DeskJet F375](#); [DeskJet F378](#); [DeskJet F380](#); [DeskJet F385](#); [DeskJet F388](#); [DeskJet F390](#); [DeskJet F394](#); [DeskJet F2100](#); [DeskJet F2110](#); [DeskJet F2120](#); [DeskJet F2140](#); [DeskJet F2180](#); [DeskJet F2185](#); [DeskJet F2187](#); [DeskJet F2200](#); [DeskJet F2224](#); [DeskJet F2235](#); [DeskJet F2275](#); [DeskJet F2276](#); [DeskJet F2280](#); [DeskJet F2288](#); [DeskJet F2290](#); [DeskJet F4100](#); [DeskJet F4135](#); [DeskJet F4140](#); [DeskJet F4150](#); [DeskJet F4172](#); [DeskJet F4175](#); [DeskJet F2400](#); [DeskJet F2420](#); [DeskJet F2480](#); [DeskJet F2492](#); [DeskJet F4180](#); [DeskJet F4185](#); [DeskJet F4188](#); [DeskJet F4190](#); [DeskJet F4194](#); [DeskJet F4200](#); [DeskJet F4210](#); [DeskJet F4220](#); [DeskJet F4224](#); [DeskJet F4240](#); [DeskJet F4272](#); [DeskJet F4273](#); [DeskJet F4274](#); [DeskJet F4280](#); [DeskJet F4283](#); [DeskJet F4292](#); [DeskJet F4293](#); [DeskJet F4294](#); [DeskJet F4470](#); [DeskJet F4472](#); [DeskJet F4480](#); [DeskJet F4492](#); [DeskJet F4500](#); [DeskJet F4580](#); [DeskJet F4583](#); [Deskjet Ink Advantage 1015](#); [Deskjet Ink Advantage 1515](#); [Deskjet Ink Advantage 2515](#); [Deskjet Ink Advantage 2545](#); [Deskjet Ink Advantage 2645](#); [Deskjet Ink Advantage 3515](#); [Deskjet Ink Advantage 3545](#); [Deskjet Ink Advantage 3700MFP](#); [Deskjet Ink Advantage 4515](#); [Deskjet Ink Advantage 4645](#); [Deskjet Plus 4110](#); [Deskjet Plus 4110e](#); [Deskjet Plus 4120](#); [Deskjet Plus 4120e](#); [Deskjet Plus 4121](#); [Deskjet Plus 4121e](#); [Deskjet Plus 4122](#); [Deskjet Plus 4122e](#); [Deskjet Plus 4130](#); [Deskjet Plus 4130e](#); [Deskjet Plus 4132](#); [Deskjet Plus 4132e](#); [Deskjet Plus 4140](#); [Deskjet Plus 4140e](#); [Deskjet Plus 4152](#); [Deskjet Plus 4152e](#); [Deskjet Plus 4155](#); [Deskjet Plus 4155e](#); [Deskjet Plus 4158](#); [Deskjet Plus 4158e](#); [Deskjet Plus 4210](#); [Deskjet Plus 4210e](#).

DIGITAL COPIER

[Digital Copier 310](#); [Digital Copier 410](#).

ENVY

[Envy 100](#); [Envy 110](#); [Envy 114](#); [Envy 120](#); [Envy 4500 All-in-One](#); [Envy 4501 e-All-in-One](#); [Envy 4502 e-All-in-One](#); [Envy 4503 e-All-in-One](#); [Envy 4504 e-All-in-One](#); [Envy 4505 e-All-in-One](#); [Envy 4506 e-All-in-One](#); [Envy 4507 e-All-in-One](#); [Envy 4508 e-All-in-One](#); [Envy 4511](#); [Envy 4512](#); [Envy 4513](#); [Envy 4516](#); [Envy 4520 All-in-One](#); [Envy 4521](#); [Envy 4522](#); [Envy 4523](#); [Envy 4524](#); [Envy 4525 All-in-One](#); [Envy 4526 All-in-One](#); [Envy 4527](#); [Envy 4528](#); [Envy 4655 All-in-One](#); [Envy 5000](#); [Envy 5000 Series](#); [Envy 5010](#); [Envy 5020](#); [Envy 5030](#); [Envy 5032](#); [Envy 5034](#); [Envy 5052](#); [Envy 5055](#); [Envy 5530 e-All-in-One](#); [Envy 5532 e-All-in-One](#); [Envy 5534 e-All-in-One](#); [Envy 5535 e-All-in-One](#); [Envy 5536 e-All-in-One](#); [Envy 5539 e-All-in-One](#); [Envy 5540 e-All-in-One](#); [Envy 5541 e-All-in-One](#); [Envy 5542 e-All-in-One](#); [Envy 5544 e-All-in-One](#); [Envy 5545](#); [Envy 5546 e-All-in-One](#); [Envy 5547 e-All-in-One](#); [Envy 5548 e-All-in-One](#); [Envy 5600 Series](#); [Envy 5640 e-All-in-One](#); [Envy 5642](#); [Envy 5643](#); [Envy 5644 e-All-in-One](#); [Envy 5646 e-All-in-One](#); [Envy 5660 e-All-in-One](#); [Envy 5661 e-All-in-One](#); [Envy 5663 e-All-in-One](#); [Envy 5664 e-All-in-One](#); [Envy 5665](#); [Envy 6010](#); [Envy 6010e](#); [Envy 6012](#); [Envy 6012e](#); [Envy 6015](#); [Envy 6015e](#); [Envy 6020](#); [Envy 6020e](#); [Envy 6022](#); [Envy 6022e](#); [Envy 6030](#); [Envy 6030e](#); [Envy 6032](#); [Envy 6032e](#); [Envy 6052](#); [Envy 6052e](#); [Envy 6055](#); [Envy 6055e](#); [Envy 6058](#); [Envy 6058e](#); [Envy 6065](#); [Envy 6065e](#); [Envy 6110e All-in-One](#); [Envy 6120e All-in-One](#); [Envy 6122e All-in-One](#); [Envy 6130e All-in-One](#); [Envy 6132e All-in-One](#); [Envy 6520e All-in-One](#); [Envy 6530e All-in-One](#); [Envy 6532e All-in-One](#); [Envy 7600 Series](#); [Envy 7640 e-All-in-One](#); [Envy 7643 e-All-in-One](#); [Envy 7644 e-All-in-One](#); [Envy 7645 e-All-in-One](#); [Envy Inspire 7220e](#); [Envy Inspire 7221e](#); [Envy Inspire 7224e](#); [Envy Inspire 7920e](#); [Envy Inspire 7921e](#); [Envy Inspire 7924e](#); [Envy Inspire 7925e](#); [Envy Photo 6220](#); [Envy Photo 6222](#); [Envy Photo 6230](#); [Envy Photo 6232](#); [Envy Photo 6234](#); [Envy Photo 6255](#); [Envy Photo 7120](#); [Envy Photo 7130](#); [Envy Photo 7134](#); [Envy Photo 7155](#); [Envy Photo 7820](#); [Envy Photo 7822](#); [Envy Photo 7830](#); [Envy Photo 7855](#); [Envy Photo 7858](#); [Envy Pro 6420](#); [Envy Pro 6420e](#); [Envy Pro 6422](#); [Envy Pro 6422e](#); [Envy Pro 6430](#); [Envy Pro 6430e](#); [Envy Pro 6432](#); [Envy Pro 6452](#); [Envy Pro 6452e](#); [Envy Pro 6454](#); [Envy Pro 6454e](#); [Envy Pro 6455](#); [Envy Pro 6455e](#); [Envy Pro 6458](#); [Envy Pro 6458e](#); [Envy Pro 6475](#); [Envy Pro 6475e](#).

FAX

[Fax 410sz](#); [Fax 1220](#); [Fax 1230](#); [Fax 1230XI](#); [Fax 1240](#); [Fax 1250](#); [Fax 3180](#).

OFFICEJET

[OfficeJet 100 Mobildrucker L411A](#); [OfficeJet 150 Mobile](#); [OfficeJet 200](#); [OfficeJet 200 Mobile](#); [OfficeJet 200 Series](#); [OfficeJet 200C](#); [OfficeJet 201](#); [OfficeJet 202](#); [OfficeJet 202C](#); [OfficeJet 250 Mobile](#); [OfficeJet 250 Series](#); [OfficeJet 252 Mobile](#); [Officejet 500XI](#); [OfficeJet 1110](#); [Officejet 1170c](#); [Officejet 1170cse](#); [Officejet 1170cxi](#); [Officejet 1175c](#); [Officejet 1175cse](#); [Officejet 1175cxi](#); [Officejet 1510ASL](#); [Officejet 2600 Series](#); [Officejet 2620 All-in-One](#); [Officejet 2622 All-in-One](#); [Officejet 2624 All-in-One](#); [OfficeJet 3800 Series](#); [OfficeJet 3830 All-in-One](#); [OfficeJet 3831 All-in-One](#); [OfficeJet 3832 All-in-One](#); [OfficeJet 3833 All-in-One](#); [OfficeJet 3834 All-in-One](#); [OfficeJet 3835](#); [OfficeJet 3836](#); [OfficeJet 3838](#); [OfficeJet 4105](#); [OfficeJet 4110](#); [OfficeJet 4115](#); [OfficeJet 4200](#); [OfficeJet 4210](#); [OfficeJet 4211](#); [OfficeJet 4212](#); [OfficeJet 4215](#); [Officejet 4215v](#); [Officejet 4215xi](#); [OfficeJet 4219](#); [OfficeJet 4251](#); [OfficeJet 4252](#); [OfficeJet 4255](#); [OfficeJet 4256](#); [OfficeJet 4259](#); [OfficeJet 4312](#); [OfficeJet 4314](#); [OfficeJet 4315](#); [OfficeJet 4317](#); [OfficeJet 4319](#); [OfficeJet 4355](#); [OfficeJet 4500](#); [OfficeJet 4620](#); [OfficeJet 4622](#); [Officejet 4630](#); [Officejet 4631](#); [Officejet 4632](#); [Officejet 4634](#); [Officejet 4635](#); [Officejet 4636](#); [Officejet 4639](#); [OfficeJet 4650 All-in-One](#); [OfficeJet 4651](#); [OfficeJet 4652](#); [OfficeJet 4654 All-in-One](#); [OfficeJet 4655](#); [OfficeJet 4656 All-in-One](#); [OfficeJet 4657](#); [OfficeJet 4658](#); [OfficeJet 5105](#); [OfficeJet 5110](#); [OfficeJet 5110V](#); [OfficeJet 5110XI](#); [OfficeJet 5505](#); [OfficeJet 5508](#); [OfficeJet 5510](#); [OfficeJet 5515](#); [OfficeJet 5200 Series](#); [OfficeJet 5220](#); [OfficeJet 5230](#); [OfficeJet 5232](#); [OfficeJet 5252](#); [OfficeJet 5255](#); [OfficeJet 5258](#); [OfficeJet 5264](#); [OfficeJet 5500](#); [OfficeJet 5505](#); [OfficeJet 5508](#); [OfficeJet 5510](#); [OfficeJet 5515](#); [OfficeJet 5600](#); [OfficeJet 5605](#); [Officejet 5605z](#); [OfficeJet 5608](#); [OfficeJet 5610](#); [Officejet 5610v](#); [Officejet 5610xi](#); [OfficeJet 5615](#); [OfficeJet 6100](#); [OfficeJet 6110](#); [OfficeJet 6150](#); [OfficeJet 5700 Series](#); [Officejet 5740 e-All-in-One](#); [OfficeJet 5740 Series](#); [OfficeJet 5741](#); [Officejet 5742 e-All-in-One](#); [OfficeJet 5743](#); [OfficeJet 5744 e-All-in-One](#); [OfficeJet 5745](#); [OfficeJet 5746](#); [OfficeJet 5780](#); [OfficeJet 5785](#); [OfficeJet 6000](#); [OfficeJet 6100 ePrinter H611a](#); [OfficeJet 6200](#); [OfficeJet 6203](#); [OfficeJet 6205](#); [OfficeJet 6210](#); [OfficeJet 6210v](#); [OfficeJet 6210xi](#); [OfficeJet 6215](#); [OfficeJet 6300](#); [OfficeJet 6304](#); [OfficeJet 6307](#); [OfficeJet 6308](#); [OfficeJet 6310](#); [OfficeJet 6310v](#); [OfficeJet 6310xi](#); [OfficeJet 6313](#); [OfficeJet 6315](#); [OfficeJet 6318](#); [OfficeJet 6500](#); [OfficeJet 6500 E709](#); [OfficeJet 6500 E710](#); [OfficeJet 6500 Wireless](#); [OfficeJet 6500A](#); [OfficeJet 6500A Plus](#); [OfficeJet 6600](#); [OfficeJet 6700](#); [OfficeJet 6700 Premium](#); [OfficeJet 6800 Series](#); [OfficeJet 6812](#); [OfficeJet 6815](#); [OfficeJet 6820 e-All-in-One](#); [OfficeJet 6825](#); [OfficeJet 6950](#); [OfficeJet 6951](#); [OfficeJet 6954](#); [OfficeJet 6956](#); [OfficeJet 7000](#); [OfficeJet 7000 Wide Format](#); [OfficeJet 7110 Wide Format ePrinter](#); [OfficeJet 7200](#); [OfficeJet 7205](#); [OfficeJet 7208](#); [OfficeJet 7210](#); [OfficeJet 7210v](#); [OfficeJet 7210xi](#); [OfficeJet 7213](#); [OfficeJet 7215](#); [OfficeJet 7218](#); [OfficeJet 7300](#); [OfficeJet 7310](#); [OfficeJet 7310xi](#); [OfficeJet 7313](#); [OfficeJet 7408](#); [OfficeJet 7410](#); [OfficeJet 7410xi](#); [OfficeJet 7413](#); [OfficeJet 7500A](#); [OfficeJet 7500A Wide Format](#); [OfficeJet 7510 Wide Format All-in-One](#); [OfficeJet 7510A e-All-in-One](#); [OfficeJet 7512 Wide Format All-in-One](#); [OfficeJet 7610 e-All-in-One](#); [OfficeJet 7612 e-All-in-One](#); [OfficeJet 8000 Series](#); [OfficeJet 8010 All-in-One](#); [OfficeJet 8012 All-in-One](#); [OfficeJet 8014 All-in-One](#); [OfficeJet 8014e All-in-One](#); [OfficeJet 8015 All-in-One](#); [OfficeJet 8015e All-in-One](#); [OfficeJet 8017 All-in-One](#); [OfficeJet 8022e All-in-One](#); [OfficeJet 8024eAll-in-One](#); [OfficeJet 8025e All-in-One](#); [OfficeJet 8040](#); [OfficeJet 8045](#); [Officejet 9100 series](#); [OfficeJet 9110](#); [OfficeJet 9120](#); [OfficeJet 9130](#); [OfficeJet E710A](#); [OfficeJet E710N](#); [OfficeJet G55](#); [OfficeJet G55cxi](#); [OfficeJet G85](#); [OfficeJet G85xi](#); [OfficeJet G95](#); [OfficeJet H470](#); [OfficeJet H470b](#); [OfficeJet H470wb](#); [OfficeJet J3608](#); [OfficeJet J3640](#); [OfficeJet J3650](#); [OfficeJet J3680](#); [OfficeJet J4500 series](#); [OfficeJet J4524](#); [OfficeJet J4535](#); [OfficeJet J4580](#); [OfficeJet J4585](#); [OfficeJet J4624](#); [OfficeJet J4660](#); [OfficeJet J4680](#); [OfficeJet J5500 series](#); [OfficeJet J5508](#); [OfficeJet J5520](#); [OfficeJet J5700](#); [OfficeJet J5730](#); [OfficeJet J5780](#); [OfficeJet J5785](#); [OfficeJet J5790](#); [OfficeJet J6405](#); [OfficeJet J6410](#); [OfficeJet J6413](#); [OfficeJet J6415](#); [OfficeJet J6424](#); [OfficeJet J6450](#); [OfficeJet J6480](#); [OfficeJet J6488](#); [OfficeJet K60](#); [OfficeJet K60xi](#); [OfficeJet K80](#); [OfficeJet K7100](#); [OfficeJet K7103](#); [OfficeJet K7108](#); [OfficeJet Pro 251DW](#); [OfficeJet Pro 276DW](#); [OfficeJet Pro 1150c](#); [OfficeJet Pro 1170c](#); [OfficeJet Pro 1170cse](#); [OFFICEJET PRO 1170CXI](#); [OfficeJet Pro 1175c](#); [OfficeJet Pro 1175cse](#); [OfficeJet Pro 1175cxi](#); [OfficeJet Pro 6220 ePrinter](#); [OfficeJet Pro 6230 ePrinter](#); [OfficeJet Pro 6820 e-All-in-One](#); [OfficeJet Pro 6830 e-All-in-One](#); [OfficeJet Pro 6960](#); [OfficeJet Pro 6961](#); [OfficeJet Pro 6962](#); [OfficeJet Pro 6963](#); [OfficeJet Pro 6964](#); [OfficeJet Pro 6965](#); [OfficeJet Pro 6966](#); [OfficeJet Pro 6968](#); [OfficeJet Pro 6970](#); [OfficeJet Pro 6971](#); [OfficeJet Pro 6974](#); [OfficeJet Pro 6975](#); [OfficeJet Pro 6976](#); [OfficeJet Pro 6978](#); [OfficeJet Pro 6979](#); [OfficeJet Pro 7720 All-in-One](#); [OfficeJet Pro 7730 All-in-One](#); [OfficeJet Pro 7740 All-in-One](#); [OfficeJet Pro 8022 All-in-One](#); [OfficeJet Pro 8023 All-in-One](#); [OfficeJet Pro 8024 All-in-One](#); [OfficeJet Pro 8025 All-in-One](#); [OfficeJet Pro 8100](#); [OfficeJet Pro 8210](#); [OfficeJet Pro 8216](#); [OfficeJet Pro 8218](#); [OfficeJet Pro 8600](#); [OfficeJet Pro 8600 Plus](#); [OfficeJet Pro 8610](#); [OfficeJet Pro 8615](#); [OfficeJet Pro 8616](#); [OfficeJet Pro 8620](#); [OfficeJet Pro 8625](#); [OfficeJet Pro 8630](#); [OfficeJet Pro 8640](#); [OfficeJet Pro 8660](#); [OfficeJet Pro 8710](#); [OfficeJet Pro 8715](#); [OfficeJet Pro 8718](#); [OfficeJet Pro 8719](#); [OfficeJet Pro 8720](#); [OfficeJet Pro 8725](#); [OfficeJet Pro 8728](#); [OfficeJet Pro 8730](#); [OfficeJet Pro 8740](#); [OfficeJet Pro 8745](#); [OfficeJet Pro K850](#); [OfficeJet Pro K850DN](#); [OfficeJet R40](#); [OfficeJet R40xi](#); [OfficeJet R45](#); [OfficeJet R60](#); [OfficeJet R65](#); [OfficeJet R80](#); [OfficeJet R80xi](#); [OfficeJet T45](#); [OfficeJet T45xi](#); [OfficeJet T65](#); [OfficeJet T65xi](#); [OfficeJet V30](#); [OfficeJet V40](#); [OfficeJet V40xi](#); [OfficeJet V45](#).

CONTINÚA EN LA SIGUIENTE PÁGINA

PHOTOSMART

[PhotoSmart 130](#); [PhotoSmart 325](#); [PhotoSmart 329](#); [PhotoSmart 335](#); [PhotoSmart 337](#); [PhotoSmart 338](#); [PhotoSmart 375](#); [PhotoSmart 380](#); [PhotoSmart 385](#); [PhotoSmart 420](#); [PhotoSmart 422](#); [PhotoSmart 425](#); [PhotoSmart 428](#); [PhotoSmart 470](#); [PhotoSmart 475](#); [PhotoSmart 1000](#); [PhotoSmart 1100](#); [PhotoSmart 1100xi](#); [PhotoSmart 1115](#); [PhotoSmart 1215](#); [PhotoSmart 1215vm](#); [PhotoSmart 1218](#); [PhotoSmart 1218xi](#); [PhotoSmart 1222](#); [PhotoSmart 1315](#); [PhotoSmart 1402 AiQ](#); [PhotoSmart 1410 AiQ](#); [PhotoSmart 1415 AiQ](#); [PhotoSmart 1417 AiQ](#); [PhotoSmart 2011 WiFi](#); [PhotoSmart 2400 series](#); [PhotoSmart 2405](#); [PhotoSmart 2450](#); [PhotoSmart 2570](#); [PhotoSmart 2571](#); [PhotoSmart 2573](#); [PhotoSmart 2575](#); [PhotoSmart 2575a](#); [PhotoSmart 2577](#); [PhotoSmart 2578](#); [PhotoSmart 2600](#); [PhotoSmart 2605](#); [PhotoSmart 2608](#); [PhotoSmart 2610](#); [PhotoSmart 2610v](#); [PhotoSmart 2610xi](#); [PhotoSmart 2613](#); [PhotoSmart 2615](#); [PhotoSmart 2700](#); [PhotoSmart 2710](#); [PhotoSmart 2710xi](#); [PhotoSmart 2713](#); [Photosmart 5510](#); [Photosmart 5514](#); [Photosmart 5515](#); [Photosmart 5520](#); [Photosmart 5524](#); [Photosmart 5525](#); [Photosmart 6510](#); [Photosmart 6520](#); [PhotoSmart 7000 serie](#); [PhotoSmart 7150](#); [PhotoSmart 7155](#); [PhotoSmart 7155w](#); [PhotoSmart 7260](#); [PhotoSmart 7268](#); [PhotoSmart 7345](#); [PhotoSmart 7350](#); [PhotoSmart 7445](#); [PhotoSmart 7450](#); [PhotoSmart 7458](#); [PhotoSmart 7459](#); [PhotoSmart 7510](#); [Photosmart 7520](#); [PhotoSmart 7530](#); [PhotoSmart 7550](#); [PhotoSmart 7655](#); [PhotoSmart 7660](#); [PhotoSmart 7700](#); [PhotoSmart 7755](#); [PhotoSmart 7760](#); [PhotoSmart 7762](#); [PhotoSmart 7765](#); [PhotoSmart 7800](#); [PhotoSmart 7830](#); [PhotoSmart 7838](#); [PhotoSmart 7850](#); [PhotoSmart 7850v](#); [PhotoSmart 7850xi](#); [PhotoSmart 7960](#); [PhotoSmart 8000](#); [PhotoSmart 8030](#); [PhotoSmart 8038](#); [PhotoSmart 8049](#); [PhotoSmart 8050](#); [PhotoSmart 8050v](#); [PhotoSmart 8050xi](#); [PhotoSmart 8053](#); [PhotoSmart 8150](#); [PhotoSmart 8150v](#); [PhotoSmart 8150xi](#); [PhotoSmart 8153](#); [PhotoSmart 8157](#); [PhotoSmart 8450](#); [PhotoSmart 8450gp](#); [PhotoSmart 8450v](#); [PhotoSmart 8450xi](#); [PhotoSmart 8543](#); [PhotoSmart 8750](#); [PhotoSmart 8750g](#); [PhotoSmart 8750gp](#); [PhotoSmart 8753](#); [PhotoSmart 8758](#); [PhotoSmart B010a](#); [PhotoSmart B010a CN255B](#); [PhotoSmart B109](#); [PhotoSmart B109a](#); [PhotoSmart B109d](#); [PhotoSmart B109f](#); [PhotoSmart B109n](#); [PhotoSmart B110](#); [PhotoSmart B110a](#); [PhotoSmart B110a/c/e](#); [PhotoSmart B110c](#); [PhotoSmart B110d](#); [PhotoSmart B110e](#); [PhotoSmart B209](#); [PhotoSmart B209a](#); [PhotoSmart B209c](#); [PhotoSmart C309](#); [PhotoSmart C309a](#); [PhotoSmart C309g](#); [PhotoSmart C309h](#); [PhotoSmart C310a/c](#); [PhotoSmart C410b](#); [PhotoSmart C510c](#); [PhotoSmart C3100 series](#); [PhotoSmart C3125](#); [PhotoSmart C3135](#); [PhotoSmart C3140](#); [PhotoSmart C3150](#); [PhotoSmart C3170](#); [PhotoSmart C3175](#); [PhotoSmart C3180](#); [PhotoSmart C3183](#); [PhotoSmart C3190](#); [PhotoSmart C3194](#); [PhotoSmart C4100 series](#); [PhotoSmart C4110](#); [PhotoSmart C4140](#); [PhotoSmart C4150](#); [PhotoSmart C4170](#); [PhotoSmart C4173](#); [PhotoSmart C4180](#); [PhotoSmart C4183](#); [PhotoSmart C4190](#); [PhotoSmart C4193](#); [PhotoSmart C4194](#); [PhotoSmart C4600 series](#); [PhotoSmart C4670](#); [PhotoSmart C4680](#); [PhotoSmart C4685](#); [PhotoSmart C4700 series](#); [PhotoSmart C4780](#); [PhotoSmart C4785](#); [PhotoSmart C4795](#); [PhotoSmart C4799](#); [PhotoSmart C5300 series](#); [PhotoSmart C5320](#); [PhotoSmart C5324](#); [PhotoSmart C5370](#); [PhotoSmart C5373](#); [PhotoSmart C5380](#); [PhotoSmart C5383](#); [PhotoSmart C5388](#); [PhotoSmart C5390](#); [PhotoSmart C5393](#); [PhotoSmart C4200 series](#); [PhotoSmart C4210](#); [PhotoSmart C4235](#); [PhotoSmart C4240](#); [PhotoSmart C4250](#); [PhotoSmart C4270](#); [PhotoSmart C4272](#); [PhotoSmart C4273](#); [PhotoSmart C4275](#); [PhotoSmart C4280](#); [PhotoSmart C4283](#); [PhotoSmart C4285](#); [PhotoSmart C4288](#); [PhotoSmart C4293](#); [PhotoSmart C4294](#); [PhotoSmart C4300 series](#); [PhotoSmart C4340](#); [PhotoSmart C4342](#); [PhotoSmart C4343](#); [PhotoSmart C4344](#); [PhotoSmart C4345](#); [PhotoSmart C4380](#); [PhotoSmart C4382](#); [PhotoSmart C4383](#); [PhotoSmart C4384](#); [PhotoSmart C4385](#); [PhotoSmart C4388](#); [PhotoSmart C4390](#); [PhotoSmart C4400 series](#); [PhotoSmart C4410](#); [PhotoSmart C4424](#); [PhotoSmart C4435](#); [PhotoSmart C4440](#); [PhotoSmart C4450](#); [PhotoSmart C4470](#); [PhotoSmart C4472](#); [PhotoSmart C4473](#); [PhotoSmart C4475](#); [PhotoSmart C4480](#); [PhotoSmart C4483](#); [PhotoSmart C4485](#); [PhotoSmart C4493](#); [PhotoSmart C4494](#); [PhotoSmart C4500 series](#); [PhotoSmart C4524](#); [PhotoSmart C4580](#); [PhotoSmart C4583](#); [PhotoSmart C4585](#); [PhotoSmart C4588](#); [PhotoSmart C4599](#); [PhotoSmart C5200 series](#); [PhotoSmart C5240](#); [PhotoSmart C5250](#); [PhotoSmart C5270](#); [PhotoSmart C5273](#); [PhotoSmart C5275](#); [PhotoSmart C5280](#); [PhotoSmart C5283](#); [PhotoSmart C5288](#); [PhotoSmart C5290](#); [PhotoSmart C5293](#); [PhotoSmart C5500 series](#); [PhotoSmart C5540](#); [PhotoSmart C5550](#); [PhotoSmart C5570](#); [PhotoSmart C5580](#); [PhotoSmart C6300 series](#); [PhotoSmart C6324](#); [PhotoSmart C6340](#); [PhotoSmart C6350](#); [PhotoSmart C6375](#); [PhotoSmart C6380](#); [PhotoSmart C6383](#); [PhotoSmart C6388](#); [PhotoSmart D5060](#); [PhotoSmart D5065](#); [PhotoSmart D5069](#); [PhotoSmart D5100 series](#); [PhotoSmart D5145](#); [PhotoSmart D5155](#); [PhotoSmart D5160](#); [PhotoSmart D5300 series](#); [PhotoSmart D5345](#); [PhotoSmart D5360](#); [PhotoSmart D5363](#); [PhotoSmart D5368](#); [PhotoSmart D5400](#); [PhotoSmart D5460](#); [PhotoSmart D5463](#); [PhotoSmart D5468](#); [PhotoSmart D7560](#); [PhotoSmart P1000 series](#); [PhotoSmart P1000xi](#); [PhotoSmart P1100 series](#); [PhotoSmart P1100Xi](#); [PhotoSmart P1115](#); [PhotoSmart P1215](#); [PhotoSmart P1218](#); [PhotoSmart P1315](#); [PhotoSmart Plus B209a](#); [PhotoSmart Plus B210a](#); [PhotoSmart Plus B210a/c/d](#); [PhotoSmart Plus B210c](#); [PhotoSmart Premium C310a](#); [PhotoSmart Premium Fax](#); [PhotoSmart Pro B8330](#); [PhotoSmart Pro B8350](#); [PhotoSmart Pro B8353](#); [PhotoSmart Pro B8550](#); [Photosmart Wireless CN245B](#).

PSC

[Psc 500](#); [Psc 500CXI](#); [Psc 500XI](#); [Psc 700 series](#); [Psc 720](#); [Psc 750](#); [Psc 750CXI](#); [Psc 750XI](#); [Psc 760](#); [Psc 900](#); [Psc 920](#); [Psc 950](#); [Psc 950VR](#); [Psc 952](#); [Psc 1100](#); [Psc 1110](#); [Psc 1110xi](#); [Psc 1118](#); [Psc 1200](#); [Psc 1205](#); [Psc 1209](#); [Psc 1210](#); [Psc 1210v](#); [Psc 1210xi](#); [Psc 1213](#); [Psc 1215](#); [Psc 1216](#); [Psc 1217](#); [Psc 1218](#); [Psc 1219](#); [Psc 1230](#); [PSC 1250](#); [Psc 1300](#); [Psc 1310](#); [Psc 1311](#); [Psc 1312](#); [Psc 1315](#); [Psc 1315v](#); [Psc 1315xi](#); [Psc 1317](#); [Psc 1318](#); [Psc 1340](#); [Psc 1345](#); [Psc 1350](#); [Psc 1355](#); [Psc 1400](#); [Psc 1401](#); [Psc 1402](#); [Psc 1403](#); [Psc 1406](#); [Psc 1408](#); [Psc 1410](#); [Psc 1410v](#); [Psc 1410xi](#); [Psc 1412](#); [Psc 1415](#); [Psc 1417](#); [Psc 1500](#); [Psc 1510](#); [Psc 1513](#); [Psc 1545](#); [Psc 1600](#); [Psc 1603](#); [Psc 1605](#); [Psc 1610](#); [Psc 1610v](#); [Psc 1610xi](#); [Psc 1613](#); [Psc 1615](#); [Psc 1915](#); [Psc 2000](#); [Psc 2100](#); [Psc 2105](#); [Psc 2108](#); [Psc 2110](#); [Psc 2110v](#); [Psc 2110xi](#); [Psc 2115](#); [Psc 2150](#); [Psc 2170 series](#); [Psc 2171](#); [Psc 2175](#); [Psc 2175v](#); [Psc 2175xi](#); [Psc 2179](#); [Psc 2200](#); [Psc 2210](#); [Psc 2210V](#); [Psc 2210XI](#); [Psc 2212](#); [Psc 2215](#); [Psc 2300](#); [Psc 2310](#); [Psc 2350](#); [Psc 2352](#); [Psc 2353](#); [Psc 2355](#); [Psc 2355P](#); [Psc 2355v](#); [Psc 2355xi](#); [Psc 2357](#); [Psc 2358](#); [Psc 2400](#); [Psc 2405](#); [Psc 2410](#); [Psc 2420](#); [PSC 2425](#); [Psc 2500](#); [Psc 2510](#); [Psc 2550](#); [PSC 2570](#); [PSC 2575](#); [Psc 2610](#); [Psc 3180](#); [Psc 4180](#).

TANGO

[Tango 100](#); [Tango X](#).



COMPATIBLES



**Cartuchos originales descatalogados.*



Business InkJet 1000; Business InkJet 1100; Business InkJet 1100d; Business InkJet 1100DTN; Business InkJet 1200; Business InkJet 1200d; Business InkJet 1200dn; Business InkJet 1200dtn; Business InkJet 1200dtw; Business InkJet 2000; Business InkJet 2000cn; Business InkJet 2200; Business InkJet 2230; Business InkJet 2250; Business InkJet 2250tn; Business InkJet 2280; Business InkJet 2280tn; Business InkJet 2300; Business InkJet 2300dtn; Business InkJet 2300n; Business InkJet 2500c; Business InkJet 2500cm; Business InkJet 2600; Business InkJet 2600dn; Business InkJet 2800; Business InkJet 2800dt; Business InkJet 2800dtn; Business InkJet 3000; Business InkJet 3000DTN; Business InkJet 3000N; Color Inkjet CP 1700; DesignJet 100; DesignJet 100+; DesignJet 110; DesignJet 110+; DesignJet 500; DesignJet 70; DesignJet 800; DesignJet 800ps; DesignJet 815mfp; DesignJet 820mfp; DesignJet ColorPro CAD; DesignJet ColorPro GA; DeskJet 2000C; DeskJet 2500C; Officejet 9100 series; OfficeJet 9110; OfficeJet 9120; OfficeJet 9130; OfficeJet Pro K850; OfficeJet Pro K850DN.

COMPATIBLES



ORIGINALES



**Para más seguridad, con-súltanos con el modelo de impresora. Dependiendo del modelo, sirve unos u otros cartuchos.*

Color Copier 110; Color Copier 120; Color Copier 140; Color Copier 145; Color Copier 150; Color Copier 155; Color Copier 160; Color Copier 170; Color Copier 180; Color Copier 190; COLOR COPIER 210; Color Copier 210LX; Color Copier 260; Color Copier 270; Color Copier 280; Color Copier 290; Color Copier 310; DESIGNJET 700; DESIGNJET 750C; DESIGNJET 750C+; DESIGNJET 755CM; DESKJET 710C; DESKJET 712C; DeskJet 720c; Deskjet 722; Deskjet 722c; DeskJet 770c; DeskJet 810C; Deskjet 812C; Deskjet 814C; DeskJet 815c; DeskJet 816c; DeskJet 820cxi; Deskjet 825c; Deskjet 825CVR; DeskJet 830c; Deskjet 840c; DeskJet 841c; DeskJet 842c; Deskjet 843c; Deskjet 845c; Deskjet 845CVR; Deskjet 850c; DeskJet 855c; Deskjet 870cxi; DeskJet 880c; DeskJet 882C; DeskJet 890c; Deskjet 890cse; Deskjet 890cxi; Deskjet 895c; Deskjet 895cse; DeskJet 895cxi; DeskJet 916c; DeskJet 920c; Deskjet 920CVR; Deskjet 920CXI; DeskJet 924c; DESKJET 930C; DESKJET 930CM; DeskJet 932c; DeskJet 935c; DeskJet 940c; Deskjet 940CVR; DeskJet 948c; DeskJet 950c; DeskJet 952c; DeskJet 955c; DeskJet 959c; DeskJet 960c; Deskjet 970cse; DeskJet 970cxi; DESKJET 980C; DeskJet 980cxi; Deskjet 990c; DeskJet 990cm; DeskJet 990cxi; DeskJet 995; DESKJET 995C; DESKJET 1000C; DeskJet 1100c; DeskJet 1120c; DeskJet 1125c; DeskJet 1180c; DeskJet 1220; DESKJET 1220C; Deskjet 1120cse; Deskjet 1120cxi; DESKJET 1220PS; Deskjet 1120xi; DeskJet 1280; DESKJET 1600C; DESKJET 1600CM; DeskJet 3810; Deskjet 3816; DeskJet 3820; DeskJet 3822; DeskJet 6120; Deskjet 6122; Deskjet 6127; DeskJet 6162; DESKJET 9300; Deskjet 9300c; Digital Copier 310; Fax 1220; Fax 1230; Fax 1230XI; Officejet 500XI; Officejet 1170c; Officejet 1170cse; Officejet 1170cxi; Officejet 1175c; Officejet 1175cse; Officejet 1175cxi; Officejet 1510ASL; OfficeJet 5105; OfficeJet 5110; OfficeJet 5110V; OfficeJet 5110XI; OfficeJet G55; OfficeJet G55cxi; OfficeJet G85; OfficeJet G85xi; OfficeJet G95; OfficeJet K60; OfficeJet K60xi; OfficeJet K80; OfficeJet Pro 1150c; OfficeJet Pro 1170c; OfficeJet Pro 1170cse; OFFICEJET PRO 1170CXI; OfficeJet Pro 1175c; OfficeJet Pro 1175cse; OfficeJet Pro 1175cxi; OfficeJet R40; OfficeJet R40xi; OfficeJet R45; OfficeJet R60; OfficeJet R65; OfficeJet R80; OfficeJet R80xi; OfficeJet T45; OfficeJet T45xi; OfficeJet T65; OfficeJet T65xi; OfficeJet V30; OfficeJet V40; OfficeJet V40xi; OfficeJet V45; PhotoSmart 1000; PhotoSmart 1100; PhotoSmart 1100xi; PhotoSmart 1115; PhotoSmart 1215; PhotoSmart 1215vm; PhotoSmart 1218; PhotoSmart 1218xi; PhotoSmart 1315; PhotoSmart P1000 series; PhotoSmart P1000xi; PhotoSmart P1100 series; PhotoSmart P1100XI; PhotoSmart P1115; PhotoSmart P1215; PhotoSmart P1218; PhotoSmart P1315; Psc 500; Psc 500CXI; Psc 500XI; Psc 700 series; Psc 720; Psc 750; Psc 750CXI; Psc 750XI; Psc 760; Psc 900; Psc 920; Psc 950; Psc 950VR; Psc 952; Psc 1230.



COMPATIBLES



 
ORIGINALES



Deskjet 3747; Deskjet 3900; DeskJet 3910; Deskjet 3915; Deskjet 3918; DeskJet 3920; DeskJet 3930; DeskJet 3930v; Deskjet 3938; DeskJet 3940; DeskJet 3940v; DeskJet D1311; DeskJet D1320; DeskJet D1330; DeskJet D1341; DeskJet D1360; DeskJet D1368; DeskJet D1400; DeskJet D1415; DeskJet D1420; DeskJet D1430; DeskJet D1445; DeskJet D1455; DeskJet D1460; DeskJet D1468; DeskJet D1470; DeskJet D1500; DeskJet D1520; DeskJet D1530; DeskJet D1550; DeskJet D1558; DeskJet D1560; DeskJet D1568; DeskJet D2320; DeskJet D2330; DeskJet D2345; DeskJet D2360; DeskJet D2368; DeskJet D2400; DeskJet D2430; DeskJet D2445; DeskJet D2460; DeskJet F2100; DeskJet F2110; DeskJet F2120; DeskJet F2140; DeskJet F2180; DeskJet F2185; DeskJet F2187; DeskJet F2200; DeskJet F2224; DeskJet F2235; DeskJet F2275; DeskJet F2276; DeskJet F2280; DeskJet F2288; DeskJet F2290; DeskJet F300; DeskJet F310; DeskJet F325; DeskJet F335; DeskJet F340; DeskJet F350; DeskJet F370; DeskJet F375; DeskJet F378; DeskJet F380; DeskJet F385; DeskJet F388; DeskJet F390; DeskJet F394; DeskJet F4100; DeskJet F4135; DeskJet F4140; DeskJet F4150; DeskJet F4172; DeskJet F4175; DeskJet F4180; DeskJet F4185; DeskJet F4188; DeskJet F4190; DeskJet F4194; Fax 1250; Fax 3180; OfficeJet 4312; OfficeJet 4314; OfficeJet 4315; OfficeJet 4317; OfficeJet 4319; OfficeJet 4355; OfficeJet J3608; OfficeJet J3640; OfficeJet J3650; OfficeJet J3680; OfficeJet J5500 series; OfficeJet J5508; OfficeJet J5520; PhotoSmart 1402 AiO; PhotoSmart 1410 AiO; PhotoSmart 1415 AiO; PhotoSmart 1417 AiO; Psc 1400; Psc 1401; Psc 1402; Psc 1403; Psc 1406; Psc 1408; Psc 1410; Psc 1410v; Psc 1410xi; Psc 1412; Psc 1415; Psc 1417.



COMPATIBLES

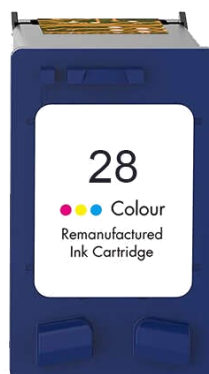

ORIGINALES



Deskjet 3300; DeskJet 3320; Deskjet 3322; Deskjet 3323; DeskJet 3325; DeskJet 3420 series; DeskJet 3425; Deskjet 3450; DeskJet 3520; Deskjet 3520v; DeskJet 3535; DeskJet 3550; DeskJet 3550v; DeskJet 3558; Deskjet 3600; DeskJet 3620; Deskjet 3620v; Deskjet 3645; DeskJet 3647; DeskJet 3650; DeskJet 3650v; Deskjet 3651; DeskJet 3653; DeskJet 3658; Deskjet 3700; DeskJet 3740; DeskJet 3740v; Deskjet 3743; Deskjet 3744; DeskJet 3745; Deskjet 3745v; Deskjet 3840; DeskJet 3843; Deskjet 3845; Deskjet 3845xi; DeskJet 3847; Fax 1240; Fax 410sz; OfficeJet 5505; OfficeJet 5508; OfficeJet 5510; OfficeJet 5515; Psc 1110xi, Psc 1118; Psc 1209; Psc 1216; Psc 1218; Psc 1315v; Psc 1315xi; Psc 1318; Psc 2175v; Psc 2175xi; Psc 2215.



COMPATIBLES

 


Deskjet 450; DeskJet 450cbi; DeskJet 450ci; Deskjet 450wb; DeskJet 5145; DeskJet 5150; DeskJet 5151; DeskJet 5160; DeskJet 5168; DeskJet 5500; DeskJet 5550; DeskJet 5552; DeskJet 5600 series; DeskJet 5650; DeskJet 5652; DeskJet 5655; Deskjet 5662; DeskJet 5850; DeskJet 9600; Deskjet 9650; DeskJet 9670; DeskJet 9680; Digital Copier 410; OfficeJet 1110; OfficeJet 4105; OfficeJet 4110; OfficeJet 4115; OfficeJet 4200; OfficeJet 4210; OfficeJet 4211; OfficeJet 4212; OfficeJet 4215; OfficeJet 4219; OfficeJet 4251; OfficeJet 4252; OfficeJet 4255; OfficeJet 4256; OfficeJet 4259; OfficeJet 5500; OfficeJet 5505; OfficeJet 5508; OfficeJet 5510; OfficeJet 5515; OfficeJet 5600; OfficeJet 5605; Officejet 5605z; OfficeJet 5610; OfficeJet 5615; OfficeJet 6100; OfficeJet 6110; OfficeJet 6150; OfficeJet J5500 series; OfficeJet J5508; OfficeJet J5520; PhotoSmart 130; PhotoSmart 2400 series; PhotoSmart 2405; PhotoSmart 2450; PhotoSmart 7000 series; PhotoSmart 7150; PhotoSmart 7155; PhotoSmart 7155w; PhotoSmart 7260; PhotoSmart 7268; PhotoSmart 7345; PhotoSmart 7350; PhotoSmart 7445; PhotoSmart 7450; PhotoSmart 7458; PhotoSmart 7459; PhotoSmart 7530; PhotoSmart 7550; PhotoSmart 7655; PhotoSmart 7660; PhotoSmart 7700; PhotoSmart 7755; PhotoSmart 7760; PhotoSmart 7762; PhotoSmart 7765; PhotoSmart 7960; Psc 1100; Psc 1110; Psc 1200; Psc 1205; Psc 1210; Psc 1210v; Psc 1210xi; Psc 1213; Psc 1215; Psc 1217; Psc 1219; Psc 1250; Psc 1300; Psc 1310; Psc 1311; Psc 1312; Psc 1315; Psc 1317; Psc 1340; Psc 1345; Psc 1350; Psc 1355; Psc 1915; Psc 2000; Psc 2100; Psc 2105; Psc 2108; Psc 2110; Psc 2110v; Psc 2110xi; Psc 2115; Psc 2150; Psc 2170 series; Psc 2171; Psc 2175; Psc 2179; Psc 2200; Psc 2210; Psc 2210V; Psc 2210XI; Psc 2212; Psc 2310; Psc 2400; Psc 2405; Psc 2410; Psc 2420; Psc 2425; Psc 2500; Psc 2510; Psc 2550; Psc 2570; Psc 2575.

COMPATIBLES



ORIGINALES

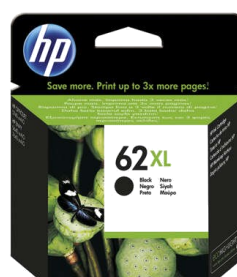


Envy 5540 e-All-in-One; Envy 5541 e-All-in-One; Envy 5542 e-All-in-One; Envy 5544 e-All-in-One; Envy 5545; Envy 5546 e-All-in-One; Envy 5547 e-All-in-One; Envy 5548 e-All-in-One; Envy 5600 Series; Envy 5640 e-All-in-One; Envy 5642; Envy 5643; Envy 5644 e-All-in-One; Envy 5646 e-All-in-One; Envy 5660 e-All-in-One; Envy 5661 e-All-in-One; Envy 5663 e-All-in-One; Envy 5664 e-All-in-One; Envy 5665; Envy 7600 Series; Envy 7640 e-All-in-One; Envy 7643 e-All-in-One; Envy 7644 e-All-in-One; Envy 7645 e-All-in-One; OfficeJet 200; OfficeJet 200 Mobile; OfficeJet 200 Series; OfficeJet 200C; OfficeJet 201; OfficeJet 202; OfficeJet 202C; OfficeJet 250 Mobile; OfficeJet 250 Series; OfficeJet 252 Mobile; OfficeJet 5700 Series; Officejet 5740 e-All-in-One; OfficeJet 5740 Series; OfficeJet 5741; Officejet 5742 e-All-in-One; OfficeJet 5743; OfficeJet 5744 e-All-in-One; OfficeJet 5745; OfficeJet 5746; OfficeJet 8000 Series; OfficeJet 8040; OfficeJet 8045.


COMPATIBLES



 ORIGINALES

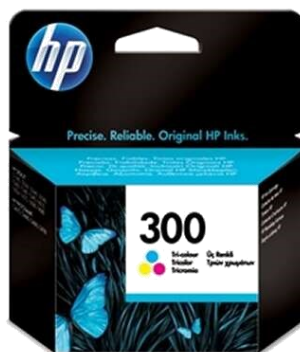

*Sustituyen a los HP 901 originales.




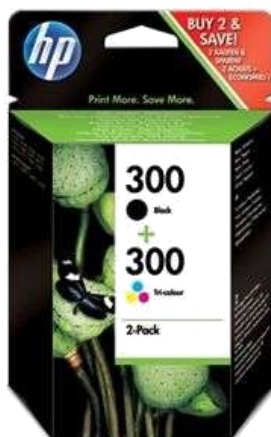 


DeskJet D1600; DeskJet D1660; DeskJet D1663; DeskJet D2500; DeskJet D2530; DeskJet D2545; DeskJet D2560; DeskJet D2563; DeskJet D2566; DeskJet D2568; DeskJet D2600; DeskJet D2660; DeskJet D2663; DeskJet D2666; DeskJet D2668; DeskJet D2680; DeskJet D5500; DeskJet D5560; DeskJet D5563; DeskJet F2400; DeskJet F2420; DeskJet F2480; DeskJet F2492; DeskJet F4200; DeskJet F4210; DeskJet F4220; DeskJet F4224; DeskJet F4240; DeskJet F4272; DeskJet F4273; DeskJet F4274; DeskJet F4280; DeskJet F4283; DeskJet F4292; DeskJet F4293; DeskJet F4294; DeskJet F4470; DeskJet F4472; DeskJet F4480; DeskJet F4492; DeskJet F4500; DeskJet F4580; DeskJet F4583; Envy 100; Envy 110; Envy 114; Envy 120; PhotoSmart C4600 series; PhotoSmart C4670; PhotoSmart C4680; PhotoSmart C4685; PhotoSmart C4700 series; PhotoSmart C4780; PhotoSmart C4785; PhotoSmart C4795; PhotoSmart C4799.

COMPATIBLES



    ORIGINALES

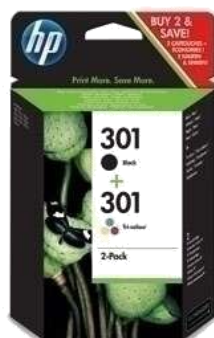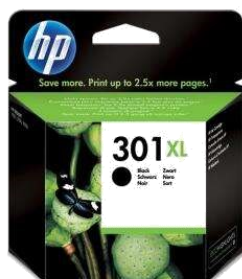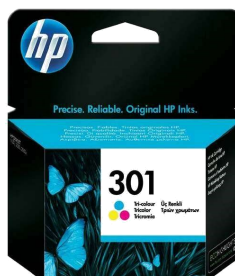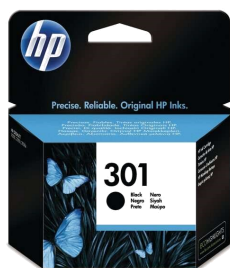

Deskjet 1000; Deskjet 1000 J110A; Deskjet 1010; DeskJet 1050; DeskJet 1050a; Deskjet 1055; Deskjet 1510 All-in-One; Deskjet 1512 All-in-One; Deskjet 1513 All-in-One; Deskjet 1514; Deskjet 2000; DeskJet 2050; DeskJet 2050 All-in-One; DeskJet 2050a; DeskJet 2050A All-in-One; DeskJet 2050S; DeskJet 2050se; DeskJet 2054a; DeskJet 2054A All-in-One; DeskJet 2510; DeskJet 2510 All-in-One; Deskjet 2511; Deskjet 2512; DeskJet 2514; DeskJet 2514 All-in-one; Deskjet 2540 All-in-One; Deskjet 2541; Deskjet 2542 All-in-One; Deskjet 2543; DeskJet 2544 All-in-One; Deskjet 2545; Deskjet 2546; Deskjet 2547; DeskJet 2548; DeskJet 2549 All-in-One; Deskjet 2550; Deskjet 3000; Deskjet 3000 J310A; DeskJet 3050; DeskJet 3050 All-in-One; DeskJet 3050a; DeskJet 3050A e-All-in-One; DeskJet 3050se; DeskJet 3050ve; DeskJet 3052; DeskJet 3052a; DeskJet 3054; DeskJet 3054a; Deskjet 3055; DeskJet 3055A; DeskJet 3055A All-in-One; Deskjet 3056A; DeskJet 3057A; DeskJet 3057A All-in-One; DeskJet 3059A; Envy 4500 All-in-One; Envy 4501 e-All-in-One; Envy 4502 e-All-in-One; Envy 4503 e-All-in-One; Envy 4504 e-All-in-One; Envy 4505 e-All-in-One; Envy 4506 e-All-in-One; Envy 4507 e-All-in-One; Envy 4508 e-All-in-One; Envy 5530 e-All-in-One; Envy 5532 e-All-in-One; Envy 5534 e-All-in-One; Envy 5535 e-All-in-One; Envy 5536 e-All-in-One; Envy 5539 e-All-in-One; Officejet 2600 Series; Officejet 2620 All-in-One; Officejet 2622 All-in-One; Officejet 2624 All-in-One; Officejet 4630; Officejet 4631; Officejet 4632; Officejet 4634; Officejet 4635; Officejet 4636; Officejet 4639.



COMPATIBLES



ORIGINALES

 
 
 


DeskJet 1110; DeskJet 1112; DeskJet 2100 Series; DeskJet 2130 All-in-One; DeskJet 2132 All-in-One; DeskJet 2133; DeskJet 2134 All-in-One; DeskJet 3630 All-in-One; DeskJet 3631; DeskJet 3632; DeskJet 3633 All-in-One; DeskJet 3634; DeskJet 3635 All-in-One; DeskJet 3636 All-in-One; DeskJet 3637; DeskJet 3638; DeskJet 3639; Envy 4511; Envy 4512; Envy 4513; Envy 4516; Envy 4520 All-in-One; Envy 4521; Envy 4522; Envy 4523; Envy 4524; Envy 4525 All-in-One; Envy 4526 All-in-One; Envy 4527; Envy 4528; Envy 4655 All-in-One; OfficeJet 3800 Series; OfficeJet 3830 All-in-One; OfficeJet 3831 All-in-One; OfficeJet 3832 All-in-One; OfficeJet 3833 All-in-One; OfficeJet 3834 All-in-One; OfficeJet 3835; OfficeJet 3836; OfficeJet 3838; OfficeJet 4650 All-in-One; OfficeJet 4651; OfficeJet 4652; OfficeJet 4654 All-in-One; OfficeJet 4655; OfficeJet 4656 All-in-One; OfficeJet 4657; OfficeJet 4658; OfficeJet 5200 Series; OfficeJet 5220; OfficeJet 5230; OfficeJet 5232; OfficeJet 5252; OfficeJet 5255; OfficeJet 5258; OfficeJet 5264.

COMPATIBLES



ORIGINALES

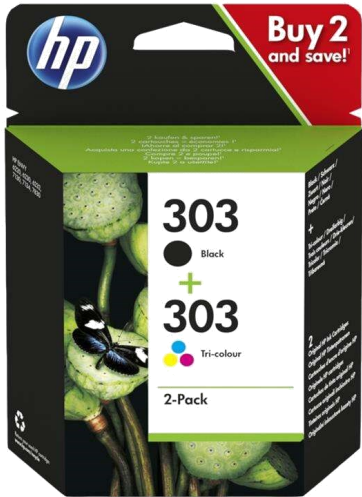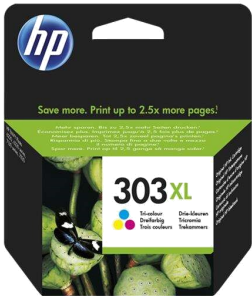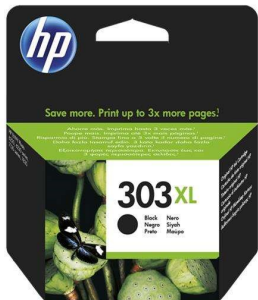


Envy Inspire 7220e; Envy Inspire 7221e; Envy Inspire 7224e; Envy Inspire 7920e; Envy Inspire 7921e; Envy Inspire 7924e; Envy Inspire 7925e; Envy Photo 6220; Envy Photo 6222; Envy Photo 6230; Envy Photo 6232; Envy Photo 6234; Envy Photo 6255; Envy Photo 7120; Envy Photo 7130; Envy Photo 7134; Envy Photo 7155; Envy Photo 7820; Envy Photo 7822; Envy Photo 7830; Envy Photo 7855; Envy Photo 7858; Tango 100; Tango X.

COMPATIBLES



 ORIGINALES


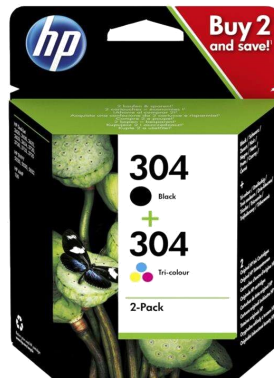


Deskjet 2600; Deskjet 2620; Deskjet 2621; Deskjet 2622; Deskjet 2623; Deskjet 2624; Deskjet 2630; Deskjet 2632; Deskjet 2633; Deskjet 2634; Deskjet 2635; Deskjet 2652; Deskjet 2655; Deskjet 3720; Deskjet 3720 Blue; Deskjet 3720 seagrass; Deskjet 3720 Series; Deskjet 3721; Deskjet 3723; Deskjet 3724; Deskjet 3730; Deskjet 3732; Deskjet 3733; Deskjet 3735; Deskjet 3750; Deskjet 3752; Deskjet 3755; Deskjet 3758; Deskjet 3760; Deskjet 3762; Deskjet 3764; Deskjet Ink Advantage 3700MFP; Envy 5000; Envy 5000 Series; Envy 5010; Envy 5020; Envy 5030; Envy 5032; Envy 5034; Envy 5052; Envy 5055.

COMPATIBLES



  ORIGINALES

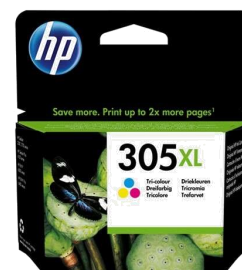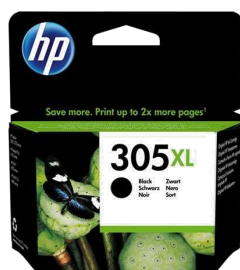

Deskjet 1210; Deskjet 1212; Deskjet 1255; Deskjet 2710; Deskjet 2720; Deskjet 2720e; Deskjet 2721; Deskjet 2721e; Deskjet 2722; Deskjet 2722e; Deskjet 2723; Deskjet 2723e; Deskjet 2724; Deskjet 2724e; Deskjet 2732; Deskjet 2732e; Deskjet 2752; Deskjet 2752e; Deskjet 2755; Deskjet 2755e; Deskjet 2810e; Deskjet 2820e; Deskjet 2821e; Deskjet 2822e; Deskjet 2823e; Deskjet 4210e; Deskjet 4220e; Deskjet 4221e; Deskjet 4222e; Deskjet 4223e; Deskjet Plus 4110; Deskjet Plus 4110e; Deskjet Plus 4120; Deskjet Plus 4120e; Deskjet Plus 4121; Deskjet Plus 4121e; Deskjet Plus 4122; Deskjet Plus 4122e; Deskjet Plus 4130; Deskjet Plus 4130e; Deskjet Plus 4132; Deskjet Plus 4132e; Deskjet Plus 4140; Deskjet Plus 4140e; Deskjet Plus 4152; Deskjet Plus 4152e; Deskjet Plus 4155; Deskjet Plus 4155e; Deskjet Plus 4158; Deskjet Plus 4158e; Deskjet Plus 4210; Deskjet Plus 4210e; Envy 6010; Envy 6010e; Envy 6012; Envy 6012e; Envy 6015; Envy 6015e; Envy 6020; Envy 6020e; Envy 6022; Envy 6022e; Envy 6030; Envy 6030e; Envy 6032; Envy 6032e; Envy 6052; Envy 6052e; Envy 6055; Envy 6055e; Envy 6058; Envy 6058e; Envy 6065; Envy 6065e; Envy Pro 6420; Envy Pro 6420e; Envy Pro 6422; Envy Pro 6422e; Envy Pro 6430; Envy Pro 6430e; Envy Pro 6432; Envy Pro 6452; Envy Pro 6452e; Envy Pro 6454; Envy Pro 6454e; Envy Pro 6455; Envy Pro 6455e; Envy Pro 6458; Envy Pro 6458e; Envy Pro 6475; Envy Pro 6475e.

ORIGINALES



Envy 6110e All-in-One; Envy 6120e All-in-One; Envy 6122e All-in-One; Envy 6130e All-in-One; Envy 6132e All-in-One; Envy 6520e All-in-One; Envy 6530e All-in-One; Envy 6532e All-in-One.



COMPATIBLES



**Para más seguridad, con-
súltanos con el modelo de
impresora. Dependiendo del
modelo, sirve unos u otros
cartuchos.*

ORIGINALES



DeskJet 460; DeskJet 460c; DeskJet 460cb; DeskJet 460wbt; Deskjet 460wf; DeskJet 5420; DeskJet 5440; DeskJet 5700 series; DeskJet 5740; Deskjet 5740xi; DeskJet 5743; DeskJet 5745; DeskJet 5748; DeskJet 5940; DeskJet 5943; DeskJet 6520; Deskjet 6520xi; DeskJet 6540; Deskjet 6540d; Deskjet 6540dt; Deskjet 6540xi; DeskJet 6543; DeskJet 6545; DeskJet 6548; DeskJet 6620; Deskjet 6620xi; DeskJet 6623; DeskJet 6628; DeskJet 6800; DeskJet 6830; DeskJet 6840; Deskjet 6840dt; Deskjet 6840xi; DeskJet 6843; Deskjet 6848; DeskJet 6940; DeskJet 6943; DeskJet 6980; DeskJet 6983; DeskJet 9800; Deskjet 9800d; DeskJet 9868; DeskJet D4160; DeskJet D4163; OfficeJet 100 Mobildrucker L411A; OfficeJet 150 Mobile; OfficeJet 6200; OfficeJet 6203; OfficeJet 6205; Of- ficeJet 6210; OfficeJet 6210v; OfficeJet 6210xi; OfficeJet 6215; OfficeJet 6300; OfficeJet 6304; OfficeJet 6307; OfficeJet 6308; OfficeJet 6310; OfficeJet 6310v; OfficeJet 6310xi; OfficeJet 6313; OfficeJet 6315; OfficeJet 6318; OfficeJet 7200; OfficeJet 7205; OfficeJet 7208; OfficeJet 7210; OfficeJet 7210v; OfficeJet 7210xi; OfficeJet 7213; OfficeJet 7215; OfficeJet 7218; OfficeJet 7300; OfficeJet 7310; Of- ficeJet 7310xi; OfficeJet 7313; OfficeJet 7408; OfficeJet 7410; OfficeJet 7410xi; OfficeJet 7413; OfficeJet H470; OfficeJet H470b; Of- ficeJet H470wbt; OfficeJet K7100; OfficeJet K7103; OfficeJet K7108; PhotoSmart 325; PhotoSmart 329; PhotoSmart 335; PhotoSmart 337; PhotoSmart 338; PhotoSmart 375; PhotoSmart 380; PhotoSmart 385; PhotoSmart 420; PhotoSmart 422; PhotoSmart 425; Pho- toSmart 428; PhotoSmart 470; PhotoSmart 475; PhotoSmart 1222; PhotoSmart 2570; PhotoSmart 2571; PhotoSmart 2573; PhotoSmart 2575; PhotoSmart 2575a; PhotoSmart 2577; PhotoSmart 2578; PhotoSmart 2600; PhotoSmart 2605; PhotoSmart 2608; PhotoSmart 2610; PhotoSmart 2610v; PhotoSmart 2610xi; PhotoSmart 2613; PhotoSmart 2615; PhotoSmart 2700; PhotoSmart 2710; PhotoSmart 2710xi; PhotoSmart 2713; PhotoSmart 7800; PhotoSmart 7830; PhotoSmart 7838; PhotoSmart 7850; PhotoSmart 7850v; PhotoSmart 7850xi; PhotoSmart 8000; PhotoSmart 8030; PhotoSmart 8038; PhotoSmart 8049; PhotoSmart 8050; PhotoSmart 8050v; PhotoSmart 8050xi; PhotoSmart 8053; PhotoSmart 8150; PhotoSmart 8150v; PhotoSmart 8150xi; PhotoSmart 8153; PhotoSmart 8157; PhotoSmart 8450; PhotoSmart 8450gp; PhotoSmart 8450v; PhotoSmart 8450xi; PhotoSmart 8543; PhotoSmart 8750; PhotoSmart 8750g; Photo- toSmart 8750gp; PhotoSmart 8753; PhotoSmart 8758; PhotoSmart C3100 series; PhotoSmart C3125; PhotoSmart C3135; PhotoSmart C3140; PhotoSmart C3150; PhotoSmart C3170; PhotoSmart C3175; PhotoSmart C3180; PhotoSmart C3183; PhotoSmart C3190; Pho- toSmart C3194; PhotoSmart C4100 series; PhotoSmart C4110; PhotoSmart C4140; PhotoSmart C4150; PhotoSmart C4170; Pho- toSmart C4173; PhotoSmart C4180; PhotoSmart C4183; PhotoSmart C4190; PhotoSmart C4193; PhotoSmart C4194; PhotoSmart D5060; PhotoSmart D5065; PhotoSmart D5069; PhotoSmart D5100 series; PhotoSmart D5145; PhotoSmart D5155; PhotoSmart D5160; PhotoSmart Pro B8330; PhotoSmart Pro B8350; PhotoSmart Pro B8353; Psc 1500; Psc 1510; Psc 1513; Psc 1545; Psc 1600; Psc 1603; Psc 1605; Psc 1610; Psc 1610v; Psc 1610xi; Psc 1613; Psc 1615; Psc 2300; Psc 2350; Psc 2352; Psc 2353; Psc 2355; Psc 2355P; Psc 2355v; Psc 2355xi; Psc 2357; Psc 2358; Psc 2610; Psc 3180; Psc 4180.



COMPATIBLES



ORIGINALES



DeskJet D4200; DeskJet D4245; DeskJet D4260; DeskJet D4263; DeskJet D4268; DeskJet D4300; DeskJet D4360; DeskJet D4363; DeskJet D4368; OfficeJet 5780; OfficeJet 5785; OfficeJet J5700; OfficeJet J5730; OfficeJet J5780; OfficeJet J5785; OfficeJet J5790; OfficeJet J6405; OfficeJet J6410; OfficeJet J6413; OfficeJet J6415; OfficeJet J6424; OfficeJet J6450; OfficeJet J6480; OfficeJet J6488; PhotoSmart C4200 series; PhotoSmart C4210; PhotoSmart C4235; PhotoSmart C4240; PhotoSmart C4250; PhotoSmart C4270; PhotoSmart C4272; PhotoSmart C4273; PhotoSmart C4275; PhotoSmart C4280; PhotoSmart C4283; PhotoSmart C4285; PhotoSmart C4288; PhotoSmart C4293; PhotoSmart C4294; PhotoSmart C4300 series; PhotoSmart C4340; PhotoSmart C4342; PhotoSmart C4343; PhotoSmart C4344; PhotoSmart C4345; PhotoSmart C4380; PhotoSmart C4382; PhotoSmart C4383; PhotoSmart C4384; PhotoSmart C4385; PhotoSmart C4388; PhotoSmart C4390; PhotoSmart C4400 series; PhotoSmart C4410; PhotoSmart C4424; PhotoSmart C4435; PhotoSmart C4440; PhotoSmart C4450; PhotoSmart C4470; PhotoSmart C4472; PhotoSmart C4473; PhotoSmart C4475; PhotoSmart C4480; PhotoSmart C4483; PhotoSmart C4485; PhotoSmart C4493; PhotoSmart C4494; PhotoSmart C4500 series; PhotoSmart C4524; PhotoSmart C4580; PhotoSmart C4583; PhotoSmart C4585; PhotoSmart C4588; PhotoSmart C4599; PhotoSmart C5200 series; PhotoSmart C5240; PhotoSmart C5250; PhotoSmart C5270; PhotoSmart C5273; PhotoSmart C5275; PhotoSmart C5280; PhotoSmart C5283; PhotoSmart C5288; PhotoSmart C5290; PhotoSmart C5293; PhotoSmart C5500 series; PhotoSmart C5540; PhotoSmart C5550; PhotoSmart C5570; PhotoSmart C5580; PhotoSmart D5300 series; PhotoSmart D5345; PhotoSmart D5360; PhotoSmart D5363; PhotoSmart D5368.



COMPATIBLES



ORIGINALES



DeskJet 3070A; Deskjet 3520 e-All-in-One; DeskJet 3522; DeskJet 3524; OfficeJet 4620; OfficeJet 4622; PhotoSmart 2011 WiFi; Photosmart 5510; Photosmart 5514; Photosmart 5515; Photosmart 5520; Photosmart 5524; Photosmart 5525; Photosmart 6510; Photosmart 6520; PhotoSmart 7510; Photosmart 7520; PhotoSmart B010a; PhotoSmart B010a CN255B; PhotoSmart B109; PhotoSmart B109a; PhotoSmart B109d; PhotoSmart B109f; PhotoSmart B109n; PhotoSmart B110; PhotoSmart B110a; PhotoSmart B110a/c/e; PhotoSmart B110c; PhotoSmart B110d; PhotoSmart B110e; PhotoSmart B209; PhotoSmart B209a; PhotoSmart B209c; PhotoSmart C309; PhotoSmart C309a; PhotoSmart C309g; PhotoSmart C309h; PhotoSmart C310a/c; PhotoSmart C410b; PhotoSmart C510c; PhotoSmart C5300 series; PhotoSmart C5320; PhotoSmart C5324; PhotoSmart C5370; PhotoSmart C5373; PhotoSmart C5380; PhotoSmart C5383; PhotoSmart C5388; PhotoSmart C5390; PhotoSmart C5393; PhotoSmart C6300 series; PhotoSmart C6324; PhotoSmart C6340; PhotoSmart C6350; PhotoSmart C6375; PhotoSmart C6380; PhotoSmart C6383; PhotoSmart C6388; PhotoSmart D5400; PhotoSmart D5460; PhotoSmart D5463; PhotoSmart D5468; PhotoSmart D7560; PhotoSmart Plus B209a; PhotoSmart Plus B210a; PhotoSmart Plus B210a/c/d; PhotoSmart Plus B210c; PhotoSmart Premium C310a; PhotoSmart Premium Fax; PhotoSmart Pro B8550; Photosmart Wireless CN245B.

COMPATIBLES



**Los originales están descatalogados.*

Deskjet Ink Advantage 1015; Deskjet Ink Advantage 1515; Deskjet Ink Advantage 2515; Deskjet Ink Advantage 2545; Deskjet Ink Advantage 2645; Deskjet Ink Advantage 3515; Deskjet Ink Advantage 3545; Deskjet Ink Advantage 4515; Deskjet Ink Advantage 4645.

 
COMPATIBLES



ORIGINALES




*Originales con la referencia HP 901 descatalogados. Sirven los originales HP 300.

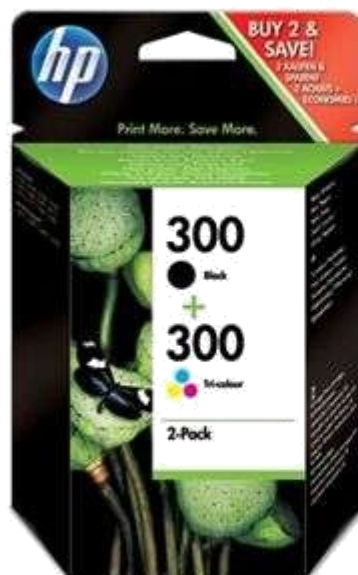

OfficeJet 4500; OfficeJet J4500 series; OfficeJet J4524; OfficeJet J4535; OfficeJet J4580; OfficeJet J4585; OfficeJet J4624; OfficeJet J4660; OfficeJet J4680.

 COMPATIBLES

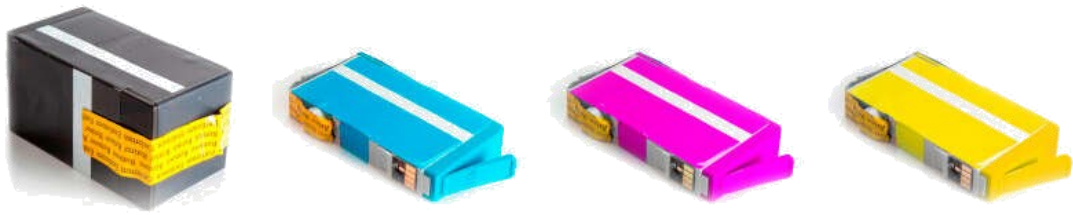

ORIGINALES



OfficeJet 6950; OfficeJet 6951; OfficeJet 6954; OfficeJet 6956; OfficeJet Pro 6960; OfficeJet Pro 6961; OfficeJet Pro 6962; OfficeJet Pro 6963; OfficeJet Pro 6964; OfficeJet Pro 6965; OfficeJet Pro 6966; OfficeJet Pro 6968; OfficeJet Pro 6970; OfficeJet Pro 6971; OfficeJet Pro 6974; OfficeJet Pro 6975; OfficeJet Pro 6976; OfficeJet Pro 6978; OfficeJet Pro 6979.



COMPATIBLES



ORIGINALES



 
OfficeJet 8010 All-in-One; OfficeJet 8012 All-in-One; OfficeJet 8014 All-in-One; OfficeJet 8014e All-in-One; OfficeJet 8015 All-in-One; OfficeJet 8015e All-in-One; OfficeJet 8017 All-in-One; OfficeJet 8022e All-in-One; OfficeJet 8024e All-in-One; OfficeJet 8025e All-in-One; OfficeJet Pro 8022 All-in-One; OfficeJet Pro 8023 All-in-One; OfficeJet Pro 8024 All-in-One; OfficeJet Pro 8025 All-in-One.



COMPATIBLES



ORIGINALES

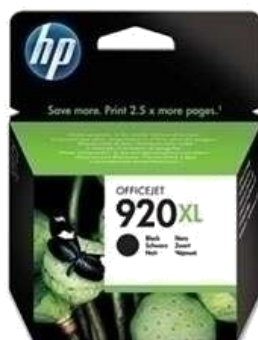

OfficeJet 6000; OfficeJet 6500; OfficeJet 6500 E709; OfficeJet 6500 E710; OfficeJet 6500 Wireless; OfficeJet 6500A; OfficeJet 6500A Plus; OfficeJet 7000; OfficeJet 7000 Wide Format; OfficeJet 7500A; OfficeJet 7500A Wide Format; OfficeJet E710A; OfficeJet E710N.

COMPATIBLES



ORIGINALES

 
 
 


OfficeJet 6100 ePrinter H611a; OfficeJet 6600; OfficeJet 6700; OfficeJet 6700 Premium; OfficeJet 7110 Wide Format ePrinter; OfficeJet 7510 Wide Format All-in-One; OfficeJet 7510A e-All-in-One; OfficeJet 7512 Wide Format All-in-One; OfficeJet 7610 e-All-in-One; OfficeJet 7612 e-All-in-One.

COMPATIBLES



ORIGINALES

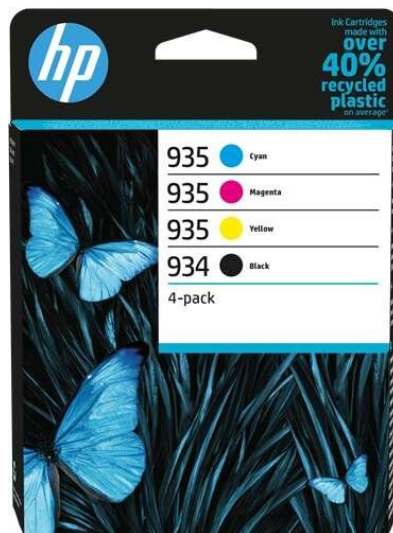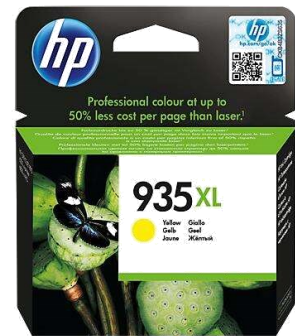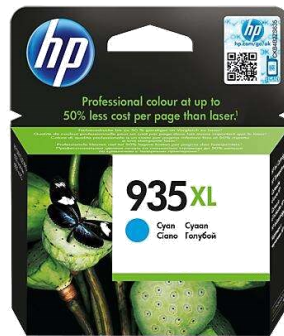

OfficeJet 6800 Series; OfficeJet 6812; OfficeJet 6815; OfficeJet 6820 e-All-in-One; OfficeJet 6825; OfficeJet Pro 6220 ePrinter; OfficeJet Pro 6230 ePrinter; OfficeJet Pro 6820 e-All-in-One; OfficeJet Pro 6830 e-All-in-One.

COMPATIBLES



ORIGINALES



OfficeJet Pro 251DW; OfficeJet Pro 276DW; OfficeJet Pro 8100; OfficeJet Pro 8600; OfficeJet Pro 8600 Plus; OfficeJet Pro 8610; OfficeJet Pro 8615; OfficeJet Pro 8616; OfficeJet Pro 8620; OfficeJet Pro 8625; OfficeJet Pro 8630; OfficeJet Pro 8640; OfficeJet Pro 8660.

COMPATIBLES



ORIGINALES



OfficeJet Pro 7720 All-in-One; OfficeJet Pro 7730 All-in-One; OfficeJet Pro 7740 All-in-One; OfficeJet Pro 8210; OfficeJet Pro 8216; OfficeJet Pro 8218; OfficeJet Pro 8710; OfficeJet Pro 8715; OfficeJet Pro 8718; OfficeJet Pro 8719; OfficeJet Pro 8720; OfficeJet Pro 8725; OfficeJet Pro 8728; OfficeJet Pro 8730; OfficeJet Pro 8740; OfficeJet Pro 8745.